


PASSENGER-SIDE AIR BAG MODULE REMOVAL/INSTALLATION

B3E081057050W01

Warning

- Handling the air bag module improperly can accidentally deploy the air bag module, which may seriously injure you. Read the service warnings and cautions before handling the air bag module. (See [SERVICE WARNINGS](#).) (See [SERVICE CAUTIONS](#).)
- Due to the adoption of 2-step deployment control in the passenger-side air bag module, depending on the impact force, it is possible that inflator No.2 might not deploy. In such cases, before disposing of the air bag module, make sure to follow the inflator deployment procedures and verify complete deployment of inflators No.1 and 2.

1. Turn the ignition switch to the LOCK position.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove the following parts:
 - (1) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION](#).)
 - (2) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - (3) Front side trim (See [FRONT SIDE TRIM REMOVAL/INSTALLATION](#).)
 - (4) Decoration panel (See [DECORATION PANEL REMOVAL/INSTALLATION](#).)
 - (5) Glove compartment (See [GLOVE COMPARTMENT REMOVAL/INSTALLATION](#).)
 - (6) Dashboard center panel (without car-navigation system) (See [DASHBOARD CENTER PANEL REMOVAL/INSTALLATION](#).)
 - (7) LCD unit (with car-navigation system) (See [LCD UNIT REMOVAL/INSTALLATION](#).)
 - (8) Dashboard garnish (See [DASHBOARD GARNISH REMOVAL/INSTALLATION](#).)
4. Remove in the order indicated in the table.

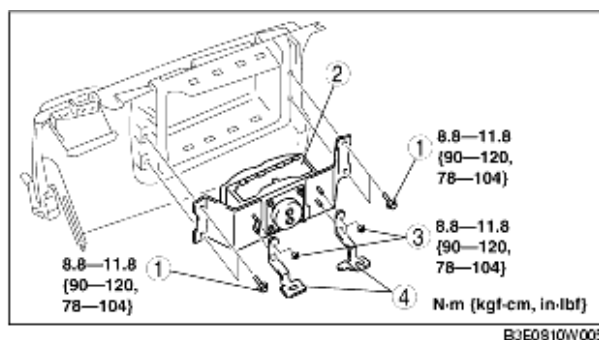

1	Bolt
2	Passenger-side air bag module
3	Nut
4	Bracket

5. Install in the reverse order of removal.
6. Turn the ignition switch to the ON position.
7. Verify that the air bag system warning light illuminates for **approx. 6 s** and goes out.

- If the air bag system warning light does not operate, refer to the on-board diagnostic system (air bag

system) and perform inspection of the system.