

CLOCK SPRING ADJUSTMENT

B3E081066123W02

Note


- The adjustment procedure is also specified on the caution label of the clock spring.

1. Set the front tires straight-ahead.


Caution

- The clock spring will break if over-wound. Do not forcibly turn the clock spring.

2. Turn the clock spring clockwise until it stops.

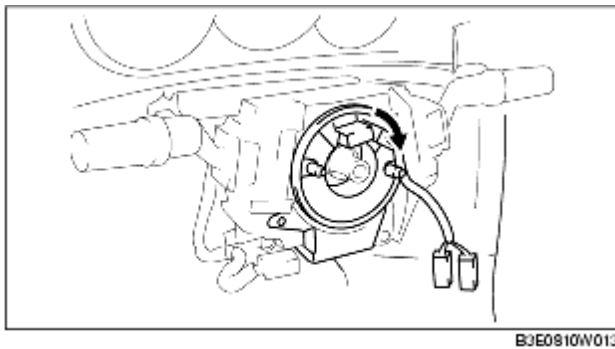

3. From the stopped position, turn the clock spring counterclockwise **2 3/4 turns**.

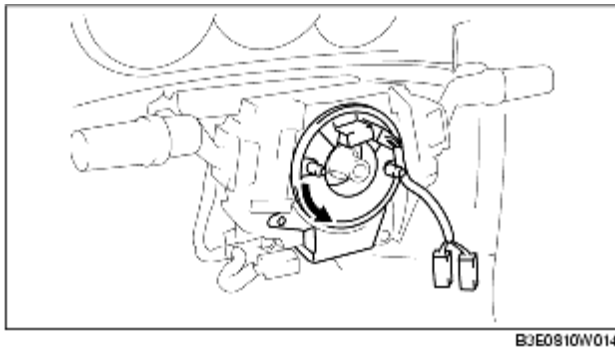

4. Align the marks.

