


PASSENGER AIR BAG DEACTIVATION (PAD) SWITCH INSPECTION

B3E081066123W05

1. Remove the PAD switch. (See [PASSENGER AIR BAG DEACTIVATION \(PAD\) SWITCH REMOVAL/INSTALLATION.](#))
2. Verify that the continuity between the PAD switch terminals is as indicated in the table.

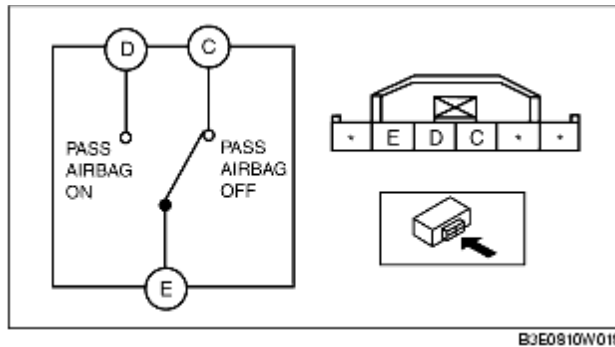

- If not as indicated in the table, replace the PAD switch.

○—○ : Continuity			
Switch position	Terminal		
	C	D	E
PASS AIRBAG OFF	○	○	○
PASS AIRBAG ON		○	○

B3E0810W019