


# FRONT BUCKLE REMOVAL/INSTALLATION

B3E081157620W01


## Warning

- Handling the front buckle (pre-tensioner front buckle) improperly can accidentally deploy the pre-tensioner, which may seriously injure you. Read the service warnings and cautions before handling the front buckle. (See [SERVICE WARNINGS](#).) (See [SERVICE CAUTIONS](#).)

1. Turn the ignition switch to the LOCK position.
2. Disconnect the negative battery cable and wait for **1 min or more**.
3. Remove the front seat. (See [FRONT SEAT REMOVAL/INSTALLATION](#).)
4. Detach the tab as shown in the figure and remove the connector from the front seat connector.

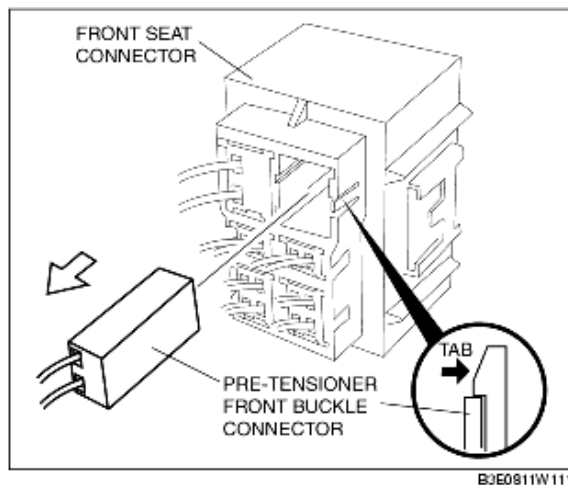

5. Remove in the order indicated in the table.

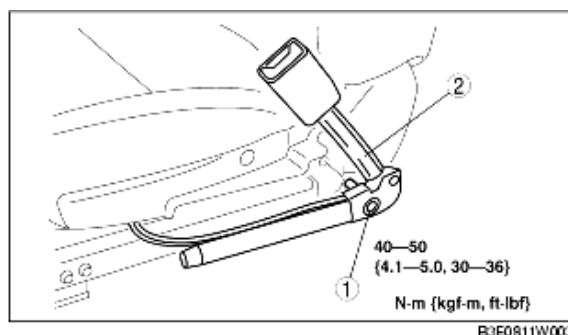

1	Screw
2	Front buckle

6. Install in the reverse order of removal.
7. Verify that the air bag system warning light illuminates for **approx. 6 s** and then goes out when the ignition switch is turned to the ON position.
  - If the air bag system warning light does not operate, refer to the on-board diagnostic system (air bag system) and perform inspection of the system.