


REAR BUCKLE REMOVAL/INSTALLATION

B3E081157620W03

1. Remove the rear seat cushion. (See [REAR SEAT REMOVAL/INSTALLATION](#).)
2. Remove in the order indicated in the table.

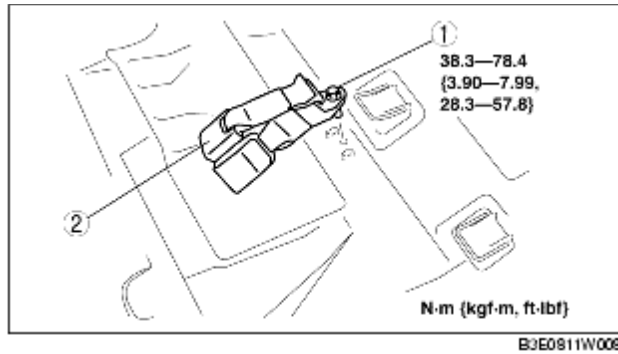

1	Bolt
2	Rear buckle

3. Install in the reverse order of removal.