


DTC INSPECTION [PJB]

B3E090201072W01

1. Connect the WDS or equivalent to the DLC-2.

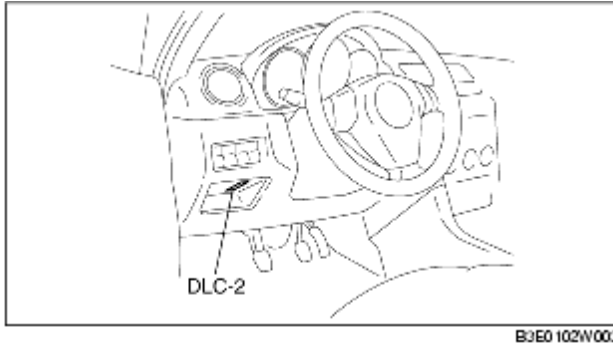

2. Verify if any DTCs are displayed.
 - If any DTCs are displayed, perform the troubleshooting according to the corresponding DTC inspection.
3. Disconnect the WDS or equivalent.