

DTC B1014

B3E090201072W04

DTC B1014	Rain sensor error
DETECTION CONDITION	Rain sensor internal malfunction
POSSIBLE CAUSE	<ul style="list-style-type: none"> • Rain sensor malfunction • PJB malfunction

Diagnostic procedure

STEP	INSPECTION		ACTION
1	INSPECT DTC <ul style="list-style-type: none"> • Clear the DTC from the PJB memory using the WDS or equivalent. • Perform the self-test. (See PJB SELF-TEST.) • Is the same DTC present? 	Yes	Replace the rain sensor, then go to the next step. (See RAIN SENSOR REMOVAL/INSTALLATION.)
		No	Go to the next step.
2	VERIFY TROUBLESHOOTING COMPLETED <ul style="list-style-type: none"> • Make sure to reconnect all disconnected connectors. • Clear the DTC from the PJB memory using the WDS or equivalent. • Perform the self-test. (See PJB SELF-TEST.) • Is the same DTC present? 	Yes	Replace the PJB. (See PASSENGER JUNCTION BOX (PJB) REMOVAL/INSTALLATION.)
		No	DTC troubleshooting completed.