

## DTC B1342

B3E090201072W11

<b>DTC B1342</b>	<b>ECU is faulted</b>
<b>DETECTION CONDITION</b>	PJB microcomputer malfunction
<b>POSSIBLE CAUSE</b>	• PJB microcomputer malfunction

### Diagnostic procedure

STEP	INSPECTION		ACTION
1	<b>INSPECT DTC</b> <ul style="list-style-type: none"><li>• Clear the DTC from the PJB memory using the WDS or equivalent.</li><li>• Perform the self-test. (See <a href="#">PJB SELF-TEST.</a>)</li><li>• Is the same DTC present?</li></ul>	Yes	Replace the PJB. (See <a href="#">PASSENGER JUNCTION BOX (PJB) REMOVAL/INSTALLATION.</a> )
		No	DTC troubleshooting completed.