

DTC INSPECTION [IMMOBILIZER SYSTEM]

B3E090201077W02

Security Light


1. Turn the ignition switch to the ON position.
2. Verify the security light state.
 - If there is any malfunction:
 - After any malfunction is detected, the security light will function as follows **for approx. 1 min.**
 - DTC 16 and lower: Flashes
 - DTC 21 and higher: Illuminated
 - If there is no malfunction:
 - The security light illuminates **for approx. 3 s** and goes out.
3. When any malfunction has been detected, read DTCs via flashing patterns displayed after the security light flashes or is illuminated **for approx. 1 min.**
 - Perform troubleshooting according to the corresponding DTC inspection.

Note

- A verified DTC is flashed 10 times repeatedly by the security light.
- If multiple DTCs are verified, the security light displays only the smallest DTC.

WDS or Equivalent

1. Connect the WDS or equivalent to the DLC-2.

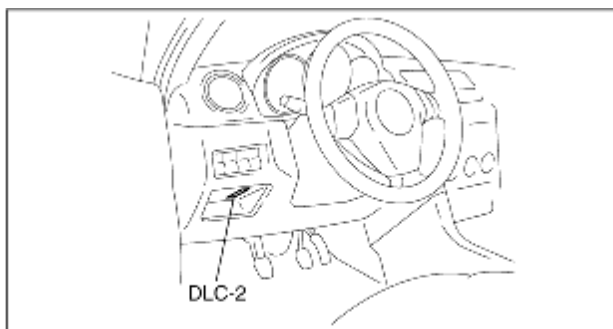

2. Verify if any DTCs are displayed.
 - If any DTCs are displayed, carry out troubleshooting according to the corresponding DTC inspection.
3. Disconnect the WDS or equivalent.