


PID/DATA MONITOR INSPECTION [IMMOBILIZER SYSTEM]

B3E090201077W04

1. Connect the WDS or equivalent to the DLC-2.

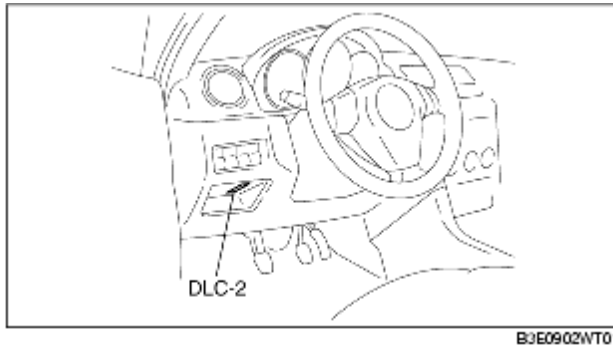

2. Display the PID/data monitor items.
 - Verify a displayed item according to the PID/data monitor table.
3. Disconnect the WDS or equivalent.