

## SECURITY LIGHT 12, DTC B2103/P1260

B3E090201077W07

<b>SECURITY LIGHT: 12</b>	<ul style="list-style-type: none"> <li>• Coil antenna malfunction</li> <li>• The PCM determined a malfunction in the coil antenna even though it is normal.</li> </ul>
<b>DTC: B2103/P1260</b>	
<b>DETECTION CONDITION</b>	<ul style="list-style-type: none"> <li>• Coil antenna malfunction</li> <li>• The PCM determined a malfunction in the coil antenna even though it is normal.</li> </ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"> <li>• Coil antenna malfunction</li> <li>• Poor connection of the coil antenna connector</li> <li>• PCM malfunction</li> </ul>

### Diagnostic Procedure

STEP	INSPECTION		ACTION
1	<b>INSPECT CONNECTOR CONNECTION</b> <ul style="list-style-type: none"> <li>• Are the coil antenna connector and the instrument cluster connector securely connected?</li> </ul>	Yes	Replace the coil antenna, then go to the next step. (See <a href="#">COIL ANTENNA REMOVAL/INSTALLATION.</a> )
		No	Connect the connector securely.
2	<b>INSPECT PCM</b> <ul style="list-style-type: none"> <li>• Turn the ignition switch to the ON position.</li> <li>• Is the DTC displayed?</li> </ul> <p>- Security light: 12</p> <p>- WDS or equivalent: B2103/P1260</p>	Yes	Replace the PCM and perform the resetting procedure for the immobilizer system when replacing the PCM. (See <a href="#">PCM REMOVAL/INSTALLATION [ZJ, Z6].</a> ) (See <a href="#">PCM REMOVAL/INSTALLATION [LF].</a> ) (See <a href="#">IMMOBILIZER SYSTEM COMPONENT REPLACEMENT/KEY ADDITION AND CLEARING.</a> )
		No	DTC troubleshooting completed.