


DTC INSPECTION [INSTRUMENT CLUSTER]

B3E090255430W06

WDS

1. Connect the WDS or equivalent to the DLC-2.

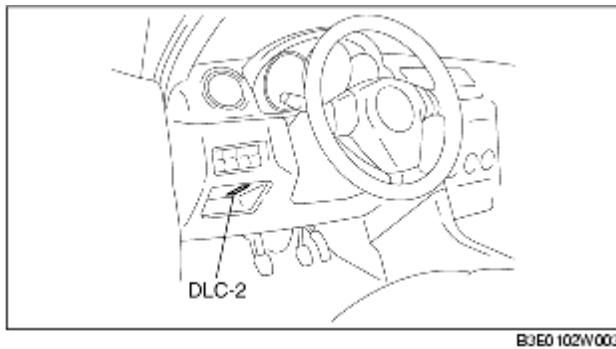

2. Verify if any DTCs are displayed.

- If any DTCs are displayed, perform the troubleshooting according to the corresponding DTC inspection.

3. Disconnect the WDS or equivalent.