

## DTC 03:ER07

B3E090266900W13

<b>DTC 03:Er07</b>	CD player
<b>DETECTION CONDITION</b>	<p><b>Note</b></p> <ul style="list-style-type: none"><li>• When error occurs, error message "CHECK CD" is displayed in the LCD.</li><li>• Base unit detects CD reading error.</li></ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"><li>• Defective CD (scratches or dirt)</li><li>• CD player malfunction</li></ul>

### Diagnostic procedure

STEP	INSPECTION	ACTION
1	Verify the condition of the CD when the error occurs. Is the CD normal?	Yes Go to the next step.
		No Repair (remove foreign material, clean) or replace the CD, and go to the next step.
2	Clear the DTC and insert a normal CD. Play the CD. Is DTC 03: Er07 displayed?	Yes Replace the CD player.
		No DTC troubleshooting completed.