

DTC 00:ER04

B3E090266900W16

DTC 00:Er04	Cassette tape
DETECTION CONDITION	<p>Note</p> <ul style="list-style-type: none"> • When error occurs, error message "CHECK TAPE" is displayed in the LCD. • Cassette tape is worn out.
POSSIBLE CAUSE	<ul style="list-style-type: none"> • Tape wear • Cassette deck malfunction

Diagnostic procedure

STEP	INSPECTION		ACTION
1	Verify condition of the cassette tape when the error occurs. Is the cassette tape normal?	Yes	Go to the next step.
		No	Replace the cassette tape and go to the next step.
2	Clear the DTC, and then insert a normal cassette tape. Play the cassette tape for 20 s or more . Is DTC 00: Er04 displayed?	Yes	Replace the cassette deck.
		No	DTC troubleshooting completed.