

DTC 06:ER02

B3E090266900W18

DTC 06:Er02	CD changer (upper module)
DETECTION CONDITION	<p>Note</p> <ul style="list-style-type: none"> When error occurs, error message "CHECK CD" is displayed in the LCD. Cannot play CD normally or change tracks.
POSSIBLE CAUSE	<ul style="list-style-type: none"> Defective CD (scratches or dirt) CD changer (upper module) malfunction

Diagnostic procedure

STEP	INSPECTION	ACTION	
1	Play all the CDs in the changer and change tracks. Can tracks be changed?	Yes	Go to Step 3.
		No	Cannot change to specific tracks. Go to the next step.
			Cannot change to any track. Change the CD and try to change tracks again. • If the function is normal, go to Step 3. • If the function is not normal, replace the CD changer (upper module).
2	Verify the condition of the CD when the error occurs. Is the CD normal?	Yes	Go to the next step.
		No	Repair (remove foreign material, clean) or replace the CD, and go to the next step.
3	Clear the DTC. Play the CD and change tracks. Is DTC 06: Er02 displayed?	Yes	Replace the CD changer (upper module).
		No	DTC troubleshooting completed.