

## DTC 06:ER07

B3E090266900W19

<b>DTC 06:Er07</b>	CD changer (upper module)
<b>DETECTION CONDITION</b>	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>When error occurs, error message "CHECK CD" is displayed in the LCD.</li> <li>Base unit detects CD reading error.</li> </ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"> <li>Defective CD (scratches or dirt)</li> <li>CD changer (upper module) malfunction</li> </ul>

### Diagnostic procedure

STEP	INSPECTION	ACTION	
1	Play all the CDs in the changer. Are they read normally?	Yes	Go to Step 3.
		No	Cannot read specific CDs. Go to the next step.
			Cannot read any CD. Go to Step 3.
2	Verify the condition of the CD when the error occurs. Is the CD normal?	Yes	Go to the next step.
		No	Repair (remove foreign material, clean) or replace the CD, and go to the next step.
3	Clear the DTC, and then insert a normal CD. Play the CD for <b>12 s or more</b> . Is DTC 06: Er07 displayed?	Yes	Replace the CD changer (upper module).
		No	DTC troubleshooting completed.