

## DTC 07:ER01

B3E090266900W20

<b>DTC 07:Er01</b>	MD player
<b>DETECTION CONDITION</b>	• MD player cannot implement insert and eject commands.
<b>POSSIBLE CAUSE</b>	• Defective MD (broken or foreign material stuck/attached) • MD player malfunction

### Diagnostic procedure

STEP	INSPECTION		ACTION
1	Can MD be ejected?	Yes	Go to the next step.
		No	Replace the MD player.
2	Verify the condition of the MD when the error occurs. Is the MD normal?	Yes	Go to the next step.
		No	Repair (remove foreign material) or replace the MD, and go to the next step.
3	Clear the DTC. Insert then eject a normal MD. Is DTC 07: Er01 displayed?	Yes	Replace the MD player.
		No	DTC troubleshooting completed.