

## DTC 10:ER01

B3E090266900W24

<b>DTC 10:Er01</b>	MP3 applicable CD player
<b>DETECTION CONDITION</b>	• CD player cannot implement insert and eject commands.
<b>POSSIBLE CAUSE</b>	• Defective CD (broken or foreign material stuck/attached) • MP3 applicable CD player malfunction

### Diagnostic procedure

STEP	INSPECTION		ACTION
1	Verify the condition of the CD when the error occurs. Is the CD normal?	Yes	Go to the next step.
		No	Repair (remove foreign material, clean) or replace the CD, and go to the next step.
2	Clear the DTC and insert a normal CD. Play the CD. Is DTC 10: Er10 displayed?	Yes	Replace the MP3 applicable CD player.
		No	DTC troubleshooting completed.