

## DTC 10:ER02

B3E090266900W25

<b>DTC 10:Er02</b>	MP3 applicable CD player
<b>DETECTION CONDITION</b>	<p><b>Note</b></p> <ul style="list-style-type: none"> <li>• When error occurs, error message "CHECK CD" is displayed in the LCD.</li> <li>• Cannot play CD normally or change tracks.</li> </ul>
<b>POSSIBLE CAUSE</b>	<ul style="list-style-type: none"> <li>• Defective CD (scratches or dirt)</li> <li>• MP3 applicable CD player malfunction</li> </ul>

STEP	INSPECTION	ACTION	
1	Play the CD and change tracks. Can tracks be changed?	Yes	Go to Step 3.
		No	Cannot change to specific tracks. Go to the next step.
			Cannot change to any track. Replace the CD and try to change tracks again. • If the function is normal, go to Step 3. • If the function is not normal, replace the MP3 applicable CD player.
2	Verify the condition of the CD when the error occurs. Is the CD normal?	Yes	Go to the next step.
		No	Repair (remove foreign material, clean) or replace the CD, and go to the next step.
3	Clear the DTC. Play the CD and change tracks. Is DTC 10: Er02 displayed?	Yes	Replace the MP3 applicable CD player.
		No	DTC troubleshooting completed.