


## FUEL-FILLER LID REMOVAL/INSTALLATION

---

B3E091042410W01

1. Remove the bolts.

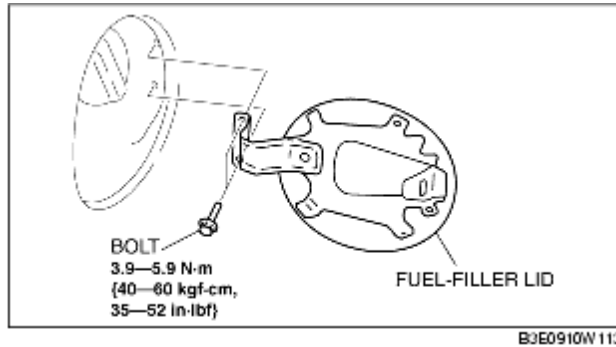

2. Remove the fuel-filler lid.
3. Install in the reverse order of removal.
4. Adjust the fuel-filler lid. (See [FUEL-FILLER LID ADJUSTMENT](#).)