
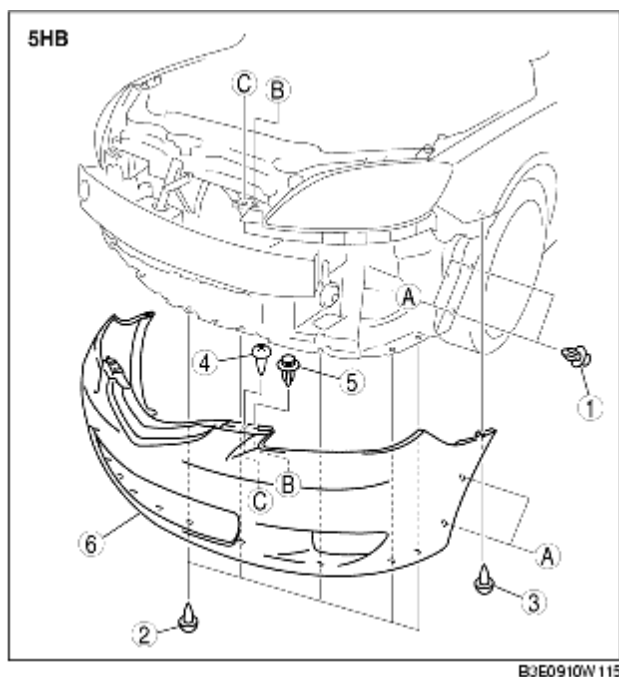


FRONT BUMPER REMOVAL/INSTALLATION

B3E091050010W01

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.

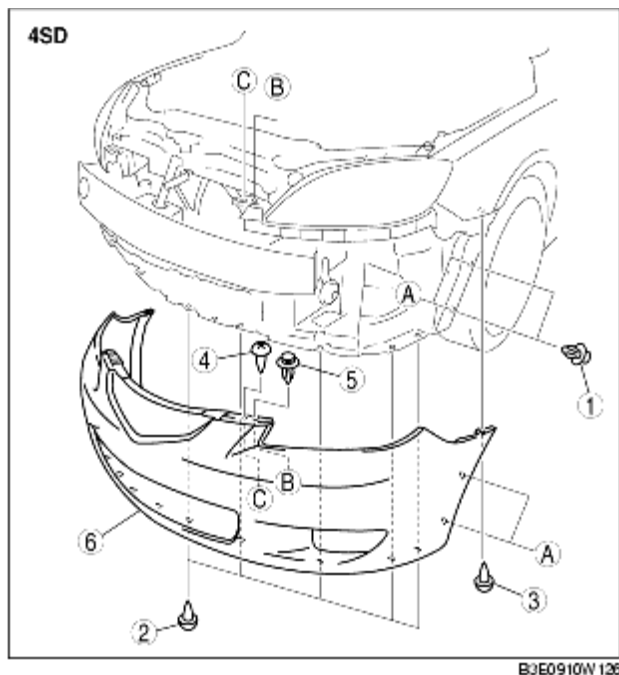

1	Fastener A
2	Screw A
3	Screw B

4	Screw C
5	Fastener B
6	Front bumper (See Front Bumper Removal Note.) (See Front Bumper Installation Note.)


3. Disconnect the front fog light connectors for vehicles with the front fog lights.
4. Disconnect the headlight cleaner hose for vehicles with the headlight cleaner.
5. Install in the reverse order of removal.
6. Adjust the front fog light aiming for vehicles with the front fog lights. (See [FRONT FOG LIGHT AIMING.](#))

Front Bumper Removal Note

1. Pull the front bumper ends (wheel arch) outward to detach from the bumper slider.

Caution

- When detaching the front bumper from the bumper slider, the front bumper could fall and be damaged. Secure the front bumper so that it does not fall.

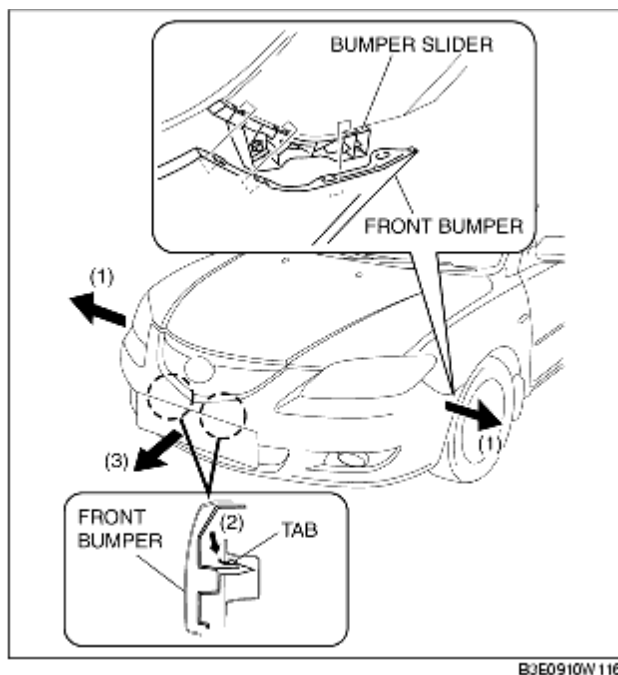

B3E0910W 116

2. Push the tabs in the direction of the arrow.
3. Remove the front bumper from the body.

Front Bumper Installation Note

1. Spread the front bumper ends apart.
2. Attach the front bumper to the body.
3. Press the front bumper connecting area into the body to engage with the bumper slider.