

# FRONT BUMPER DISASSEMBLY/ASSEMBLY


B3E091050010W02

## Standard Type

1. Remove the following parts:

- (1) Front fog lights (Vehicles with the front fog lights) (See [FRONT FOG LIGHT REMOVAL/INSTALLATION.](#))
- (2) Headlight cleaner hose (Vehicles with the headlight cleaner) (See [HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.](#))
- (3) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (See [HEADLIGHT CLEANER NOZZLE REMOVAL.](#)) (See [HEADLIGHT CLEANER NOZZLE INSTALLATION.](#))
- (4) Headlight cleaner actuator (Vehicles with the headlight cleaner) (See [HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.](#))
- (5) Radiator grille (4SD) (See [RADIATOR GRILLE REMOVAL/INSTALLATION.](#))

2. Disassemble in the order indicated in the table.

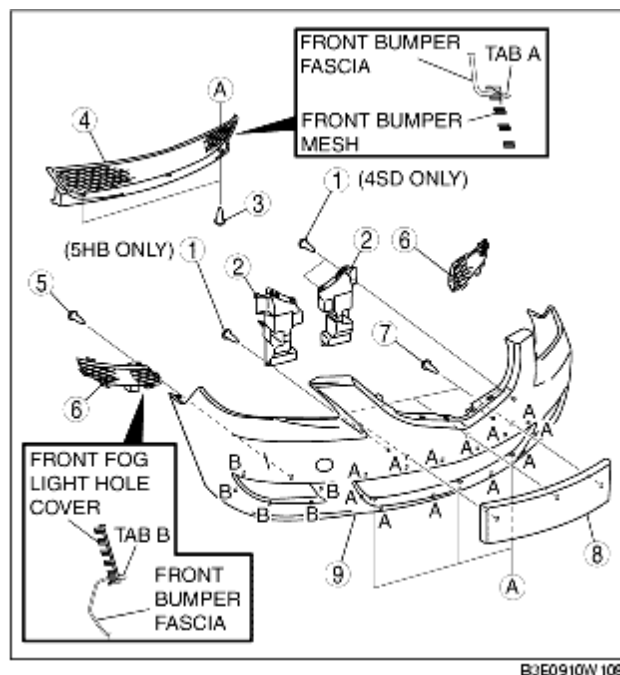

B3E0910W 108

1	Screw A
2	Set plate
3	Screw B
4	Front bumper mesh
5	Screw C (4SD)
6	Front fog light hole cover (vehicles without the front fog lights)
7	Screw D
8	License plate holder
9	Front bumper fascia


3. Assemble in the reverse order of disassembly.

## Sports Type

1. Remove the following parts:

- (1) Front fog lights (See [FRONT FOG LIGHT REMOVAL/INSTALLATION.](#))
- (2) Headlight cleaner hose (Vehicles with the headlight cleaner) (See [HEADLIGHT CLEANER HOSE REMOVAL/INSTALLATION.](#))
- (3) Headlight cleaner nozzles (Vehicles with the headlight cleaner) (See [HEADLIGHT CLEANER NOZZLE REMOVAL.](#)) (See [HEADLIGHT CLEANER NOZZLE INSTALLATION.](#))
- (4) Headlight cleaner actuator (Vehicles with the headlight cleaner) (See [HEADLIGHT CLEANER ACTUATOR REMOVAL/INSTALLATION.](#))
- (5) Radiator grille (4SD) (See [RADIATOR GRILLE REMOVAL/INSTALLATION.](#))

2. Disassemble in the order indicated in the table.

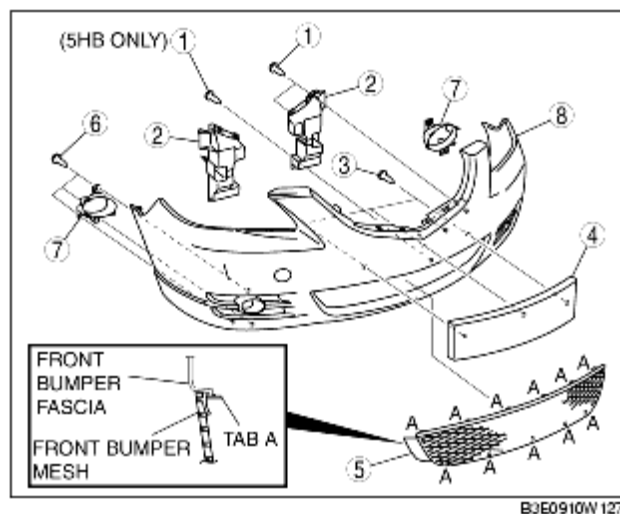

1	Screw A
2	Set plate
3	Screw B
4	License plate holder
5	Front bumper mesh
6	Screw C
7	Front fog light cover (4SD) (vehicles with the front fog lights)
8	Front bumper fascia

3. Assemble in the reverse order of disassembly.