


# REAR BUMPER REINFORCEMENT REMOVAL/INSTALLATION

B3E091050070W02

## 1. Remove the following parts:

- (1) Trunk end trim (See [TRUNK END TRIM REMOVAL/INSTALLATION.](#))
- (2) Trunk side trim (4SD) (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))
- (3) Trunk side trim (RH) (5HB) (See [TRUNK SIDE TRIM REMOVAL/INSTALLATION.](#))
- (4) Service hole cover (LH) (5HB)
- (5) Rear combination lights (See [REAR COMBINATION LIGHT REMOVAL/INSTALLATION.](#))
- (6) Rear bumper (See [REAR BUMPER REMOVAL/INSTALLATION.](#))

## 2. Remove the nuts, then remove the rear bumper reinforcement.

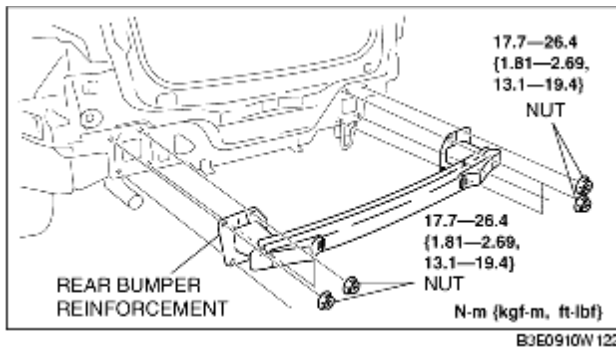

## 3. Install in the reverse order of removal.