


# BODY PANELS LOCATION INDEX

B3E091056100W01

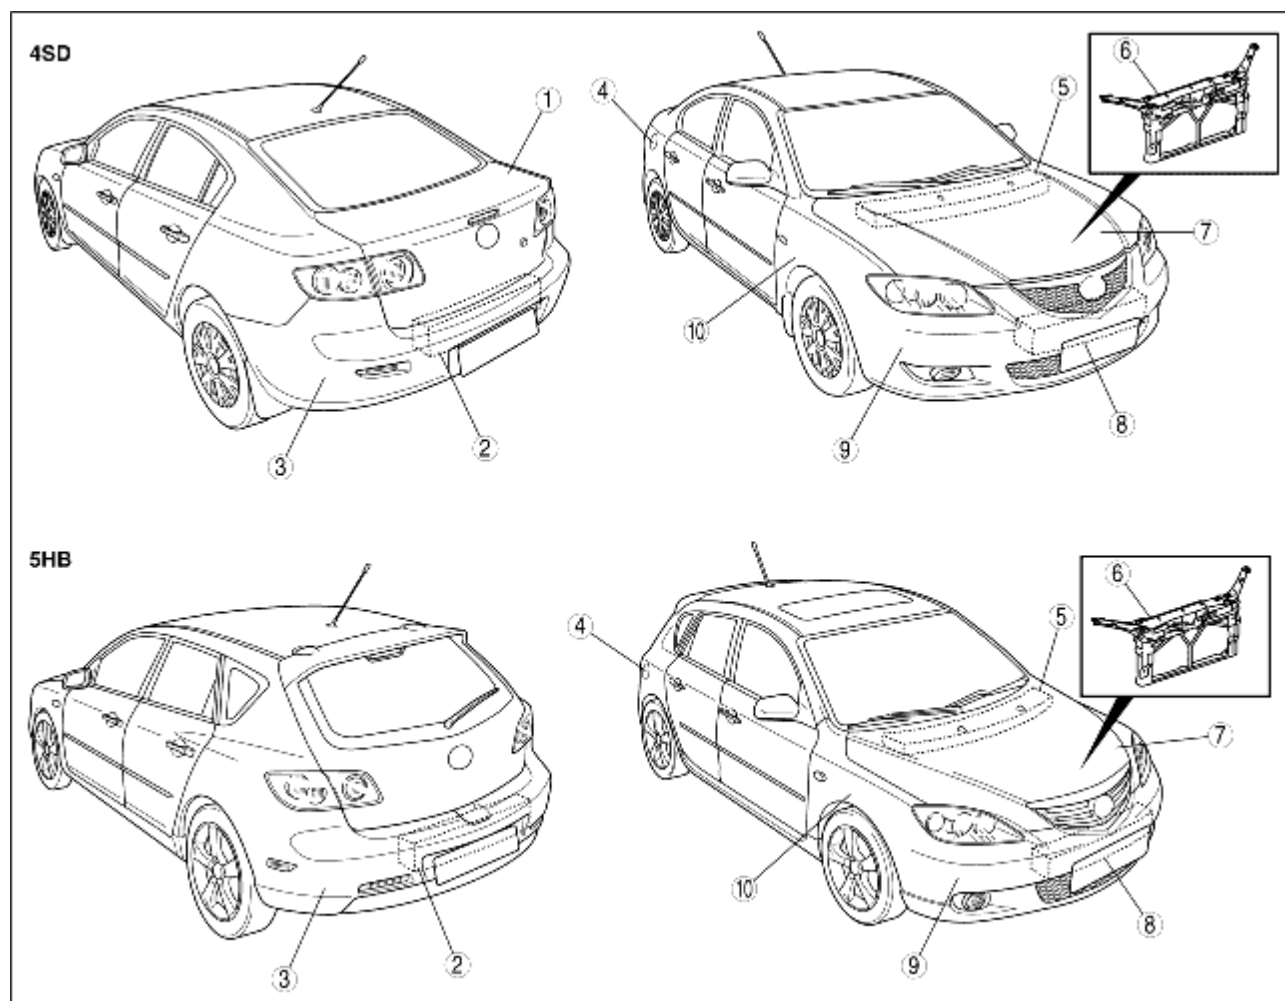

B3E0910W101

1	Trunk lid (See <a href="#">TRUNK LID REMOVAL/INSTALLATION.</a> ) (See <a href="#">TRUNK LID ADJUSTMENT.</a> ) (See <a href="#">TRUNK LID STAY DAMPER DISPOSAL.</a> )
2	Rear bumper reinforcement (See <a href="#">REAR BUMPER REINFORCEMENT REMOVAL/INSTALLATION.</a> )
3	Rear bumper (See <a href="#">REAR BUMPER REMOVAL/INSTALLATION.</a> )
4	Fuel-filler lid (See <a href="#">FUEL-FILLER LID REMOVAL/INSTALLATION.</a> ) (See <a href="#">FUEL-FILLER LID ADJUSTMENT.</a> )
5	Cowl panel (See <a href="#">COWL PANEL REMOVAL/INSTALLATION.</a> )
6	Shroud panel (See <a href="#">SHROUD PANEL REMOVAL/INSTALLATION.</a> )
7	Bonnet (See <a href="#">BONNET REMOVAL/INSTALLATION.</a> ) (See <a href="#">BONNET ADJUSTMENT.</a> )

8	Front bumper reinforcement (See <a href="#">FRONT BUMPER REINFORCEMENT REMOVAL/INSTALLATION.</a> )
9	Front bumper (See <a href="#">FRONT BUMPER REMOVAL/INSTALLATION.</a> ) (See <a href="#">FRONT BUMPER DISASSEMBLY/ASSEMBLY.</a> )
10	Front fender panel (See <a href="#">FRONT FENDER PANEL REMOVAL/INSTALLATION.</a> )