

BONNET ADJUSTMENT


B3E091056601W02

Gap Adjustment

1. Remove the following parts:


- (1) Front side turn lights (See [FRONT SIDE TURN LIGHT REMOVAL/INSTALLATION.](#))
- (2) Front bumper (See [FRONT BUMPER REMOVAL/INSTALLATION.](#))
- (3) Front combination lights (See [FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.](#))
- (4) Front fender panel (See [FRONT FENDER PANEL REMOVAL/INSTALLATION.](#))

2. Loosen the bonnet hinge installation bolts and adjust the bonnet.

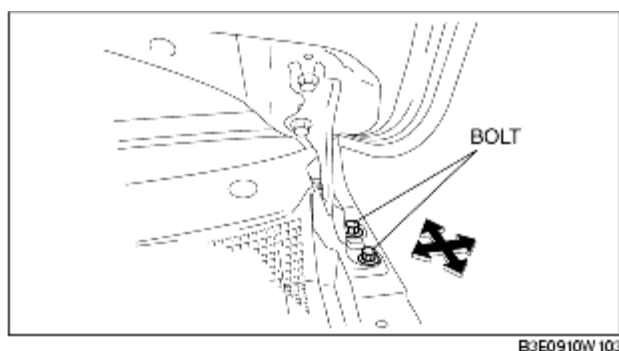

3. Tighten the bolts.

4. Verify that the gap between the bonnet and the body is within the specification.

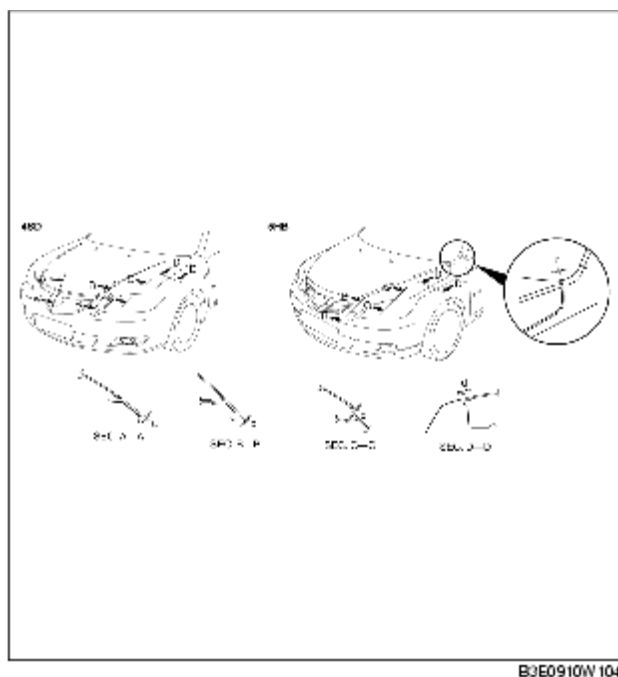

Standard clearance



a: 0.2-3.8 mm {0.0079-0.14 in}

b: -1.0-3.0 mm {-0.039-0.11 in} (4SD)


- b: -1.5-2.5 mm {-0.059-0.098 in} (5HB)
 c: -0.5-2.5 mm {-0.019-0.098 in} (4SD)
 c: -1.0-2.0 mm {-0.039-0.078 in} (5HB)
 d: 2.5-4.5 mm {0.10-0.17 in}

Height Difference Adjustment

1. Turn the stop rubber to adjust the height of the bonnet.

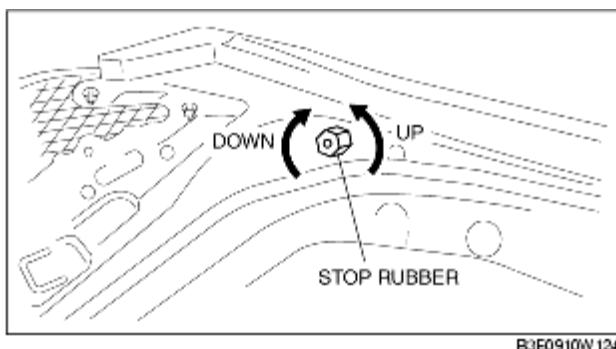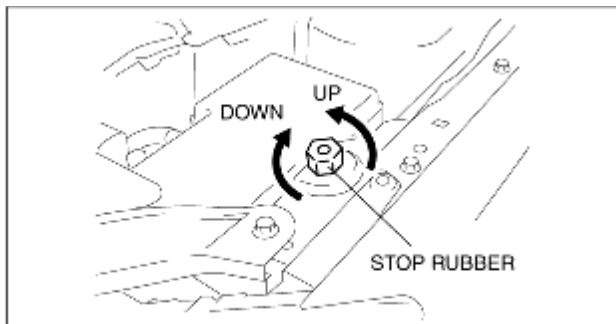

2. Verify that the height difference between the bonnet and the body is within the specification.

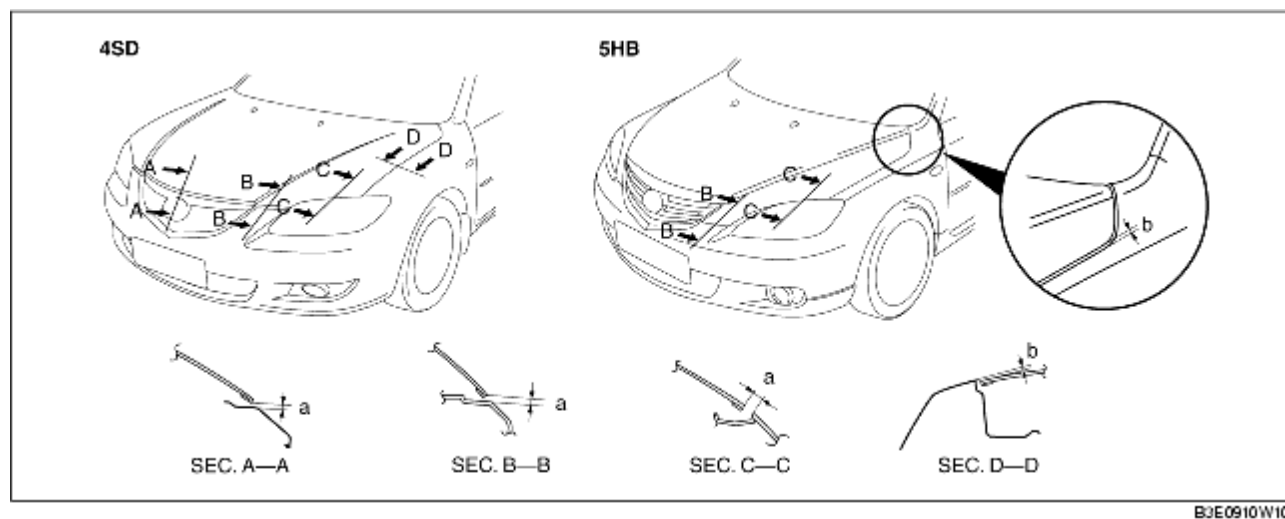

Standard clearance

- a: 3.0-6.0 mm {0.12-0.23 in}
 b: -1.5-0.5 mm {-0.059-0.019 in}
 c: -1.0-1.0 mm {-0.39-0.39 in}