


TRUNK LID ADJUSTMENT


B3E091056801W02

1. Measure the gap and height difference between the trunk lid and the body.
2. Loosen the trunk lid hinge installation bolts and adjust the trunk lid.

• If necessary, loosen the trunk lid lock striker installation bolts and adjust the trunk lid. (See [TRUNK LID LOCK STRIKER REMOVAL/INSTALLATION](#).)

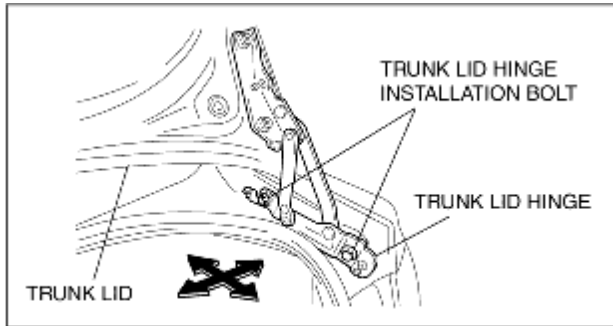

B3E0910W111

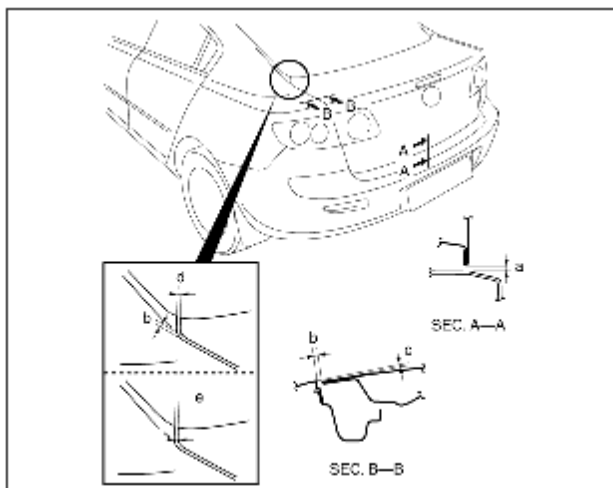

B3E0910W112

Standard clearance

- a: 4.0-8.0 mm {0.16-0.31 in}
- b: 2.5-4.5 mm {0.10-0.17 in}
- c: -0.5-1.5 mm {-0.019-0.059 in}
- d: 3.3-5.3 mm {0.13-0.20 in}

3. Tighten the bolts.