


FRONT DOOR REMOVAL/INSTALLATION

B3E091158010W02

1. Disconnect the negative battery cable.
2. To remove the checker, remove the following parts:
 - (1) Inner garnish (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
 - (2) Regulator handle (Vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
 - (3) Front door trim (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#))
 - (4) Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/INSTALLATION.](#))
3. To remove the front door hinges, remove the following parts:
 - (1) Windshield wiper arm and blade (See [WINDSHIELD WIPER ARM AND BLADE REMOVAL/INSTALLATION.](#))
 - (2) Cowl grille (See [COWL GRILLE REMOVAL/INSTALLATION.](#))
 - (3) Front bumper (See [FRONT BUMPER REMOVAL/INSTALLATION.](#))
 - (4) Front combination lights (See [FRONT COMBINATION LIGHT REMOVAL/INSTALLATION.](#))
 - (5) Side step molding (Vehicle with the side step molding) (See [SIDE STEP MOLDING REMOVAL/INSTALLATION.](#))
 - (6) Front fender panel (See [FRONT FENDER PANEL REMOVAL/INSTALLATION.](#))
4. Remove in the order indicated in the table.
5. Adjust the front door. (See [DOOR ADJUSTMENT.](#))
6. Install in the reverse order of removal.

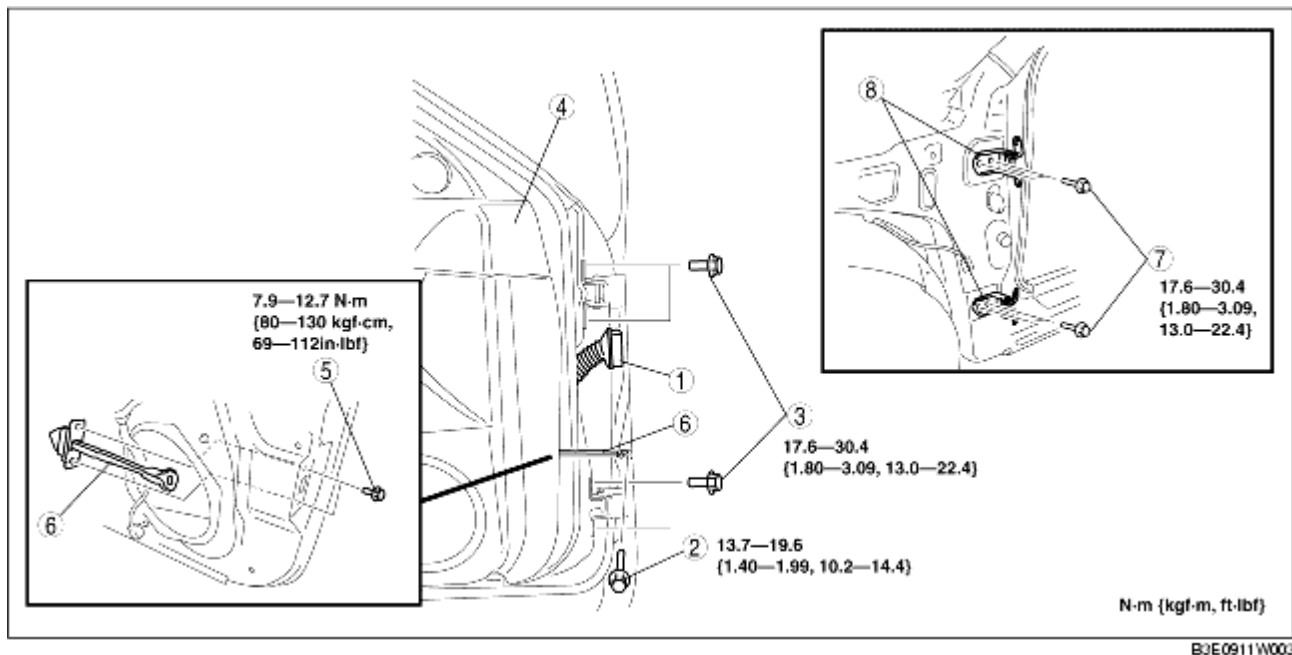

1	Connector (See Connector Removal Note.)
---	---

2	Bolt A
3	Bolt B
4	Front door
5	Bolt C
6	Checker
7	Bolt D
8	Front door hinge

Connector Removal Note

1. Pull down the lever in the direction indicated by the arrow and disconnect the connector.

