


REAR DOOR REMOVAL/INSTALLATION

B3E091158010W03

1. Disconnect the negative battery cable.
2. To remove the checker, remove the following parts:
 - (1) Regulator handle (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL](#).) (See [REGULATOR HANDLE INSTALLATION](#).)
 - (2) Rear door trim (See [REAR DOOR TRIM REMOVAL/INSTALLATION](#).)
 - (3) Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/INSTALLATION](#).)
3. To remove the hinges, remove the following parts:
 - (1) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - (2) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
 - (3) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION](#).)
4. Remove in the order indicated in the table.
5. Install in the reverse order of removal.
6. Adjust the rear door. (See [DOOR ADJUSTMENT](#).)

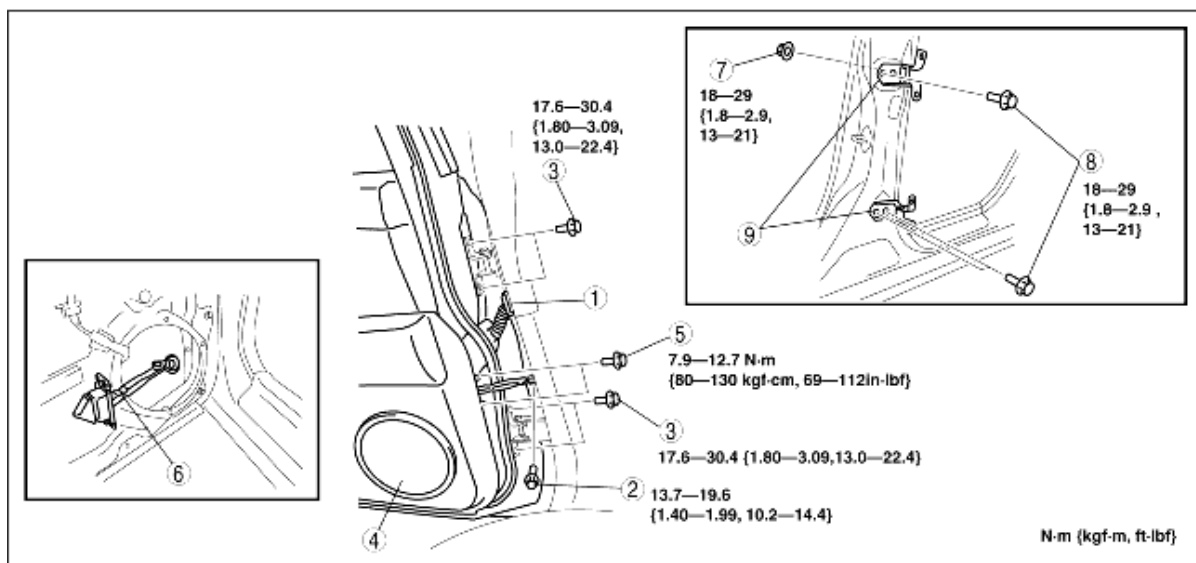

B3E0911W004

1	Connector
2	Bolt A
3	Bolt B
4	Rear door
5	Bolt C
6	Checker
7	Nut
8	Bolt D
9	Rear door hinge