

FRONT DOOR UNIT REMOVAL/INSTALLATION

B3E091159970W01

1. Remove the following parts:


- (1) Inner garnish (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
- (2) Regulator handle (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
- (3) Front door trim (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#))
- (4) Front beltline molding (See [FRONT BELTLINE MOLDING REMOVAL/INSTALLATION.](#))
- (5) Front door glass (See [FRONT DOOR GLASS REMOVAL/INSTALLATION.](#))
- (6) Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/INSTALLATION.](#))
- (7) Rod protector (See [FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION.](#))

2. Remove the rod from the front outer handle and front door key cylinder.

3. Disconnect the power outer mirror connector.


4. Disconnect the front door wiring harness connector.

5. Remove the tab, then remove the front door wiring harness bracket.

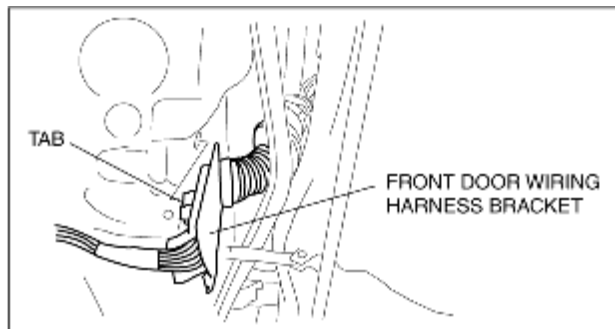

B3E0911W006

6. Remove screws A, B, and the fastener.

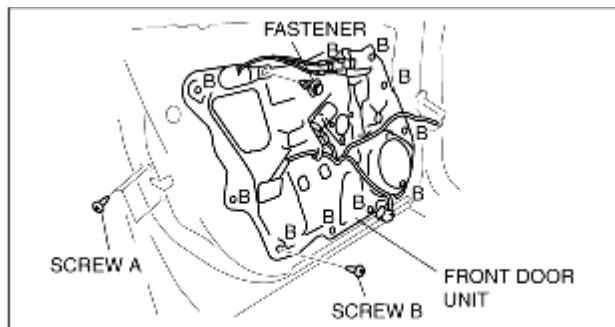

B3E0911W007

7. Remove the front door unit.

8. Install in the reverse order of removal.