

# REAR DOOR UNIT REMOVAL/INSTALLATION

B3E091159970W02


1. Remove the following parts:

- (1) Sail garnish (5HB) (See [SAIL GARNISH REMOVAL/INSTALLATION.](#))
- (2) Regulator handle (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
- (3) Rear door trim (See [REAR DOOR TRIM REMOVAL/INSTALLATION.](#))
- (4) Rear door garnish (5HB) (See [REAR DOOR GARNISH REMOVAL/INSTALLATION.](#))
- (5) Rear beltline molding (See [REAR BELTLINE MOLDING REMOVAL/INSTALLATION.](#))
- (6) Rear door glass (See [REAR DOOR GLASS REMOVAL/INSTALLATION.](#))
- (7) Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/INSTALLATION.](#))


2. Remove the rod from the outer handle.

3. Disconnect the rear door wiring harness connector.

4. Remove tabs A and B, then remove the rear door wiring harness bracket.

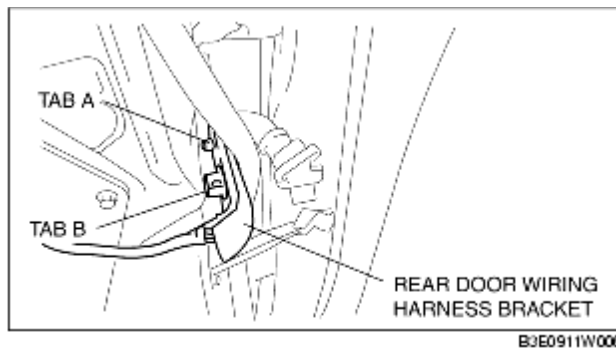

5. Remove screws A, B, and the fastener.

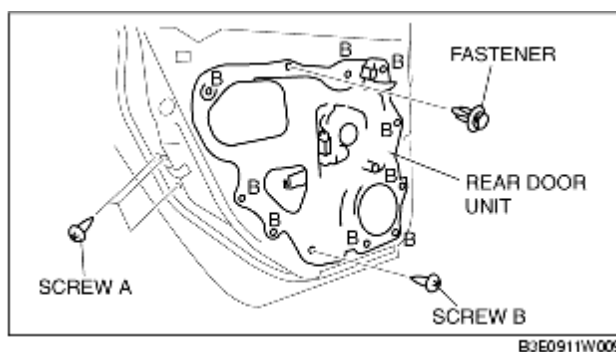

6. Remove the rear door unit.

7. Install in the reverse order of removal.