


# POWER WINDOW SYSTEM WIRING DIAGRAM

B3E091258000T03

## Power Window Main Switch

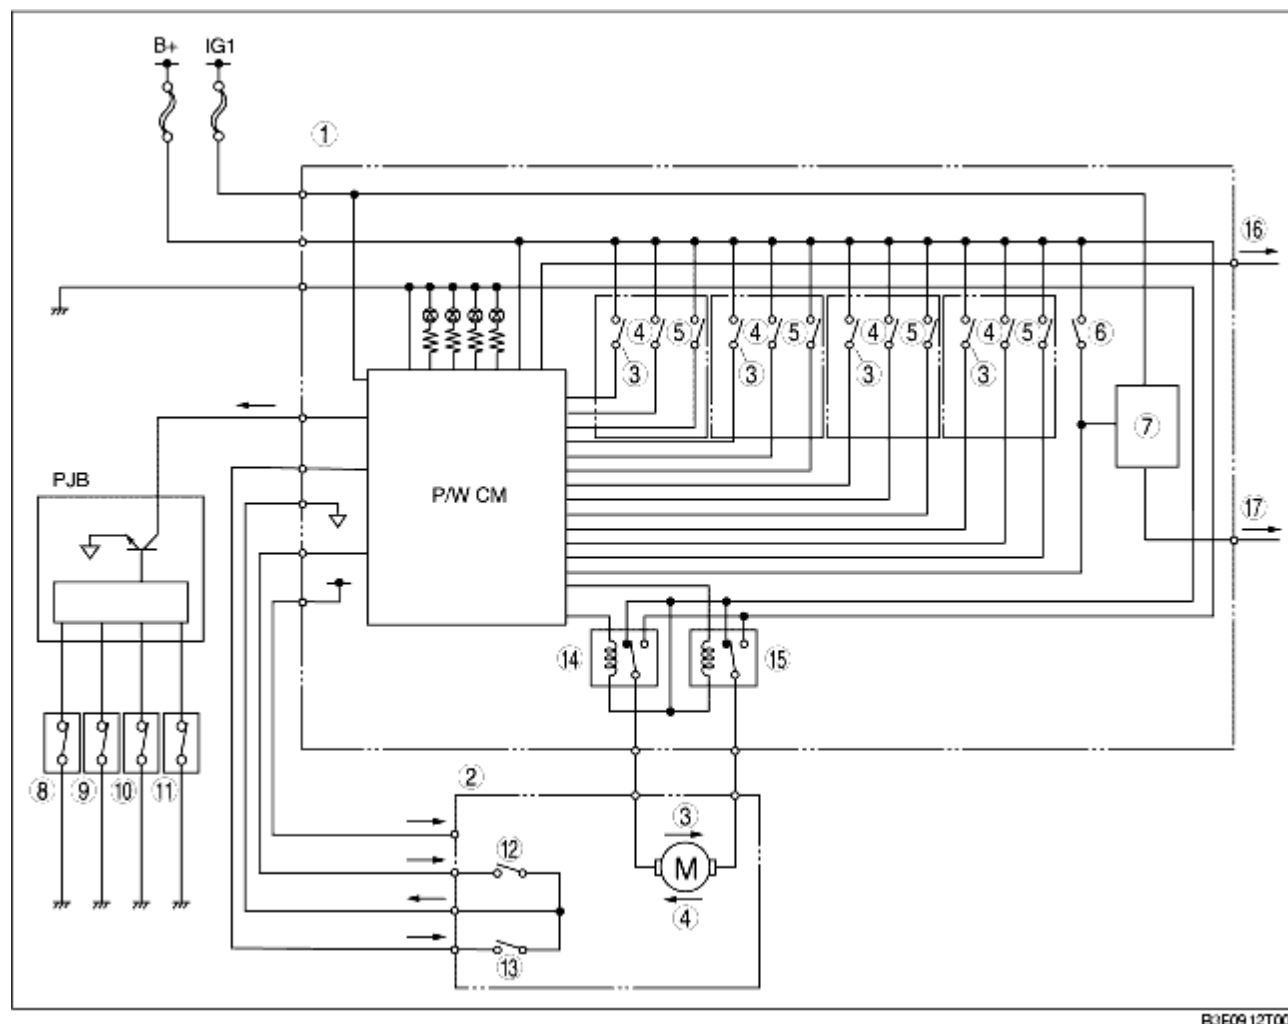


B3E09 12T005

1	Power window main switch
2	Power window motor (driver's side)
3	Close
4	Open
5	Auto
6	power-cut switch
7	Conjunction circuit
8	Door latch switch (driver's side)
9	Door latch switch (passenger's side)
10	Door latch switch (rear left)
11	Door latch switch (rear right)

12	Hall effect switch 1
13	Hall effect switch 2
14	Close relay
15	Open relay
16	To power window subswitch A
17	To power window subswitch B

## Power Window Subswitch

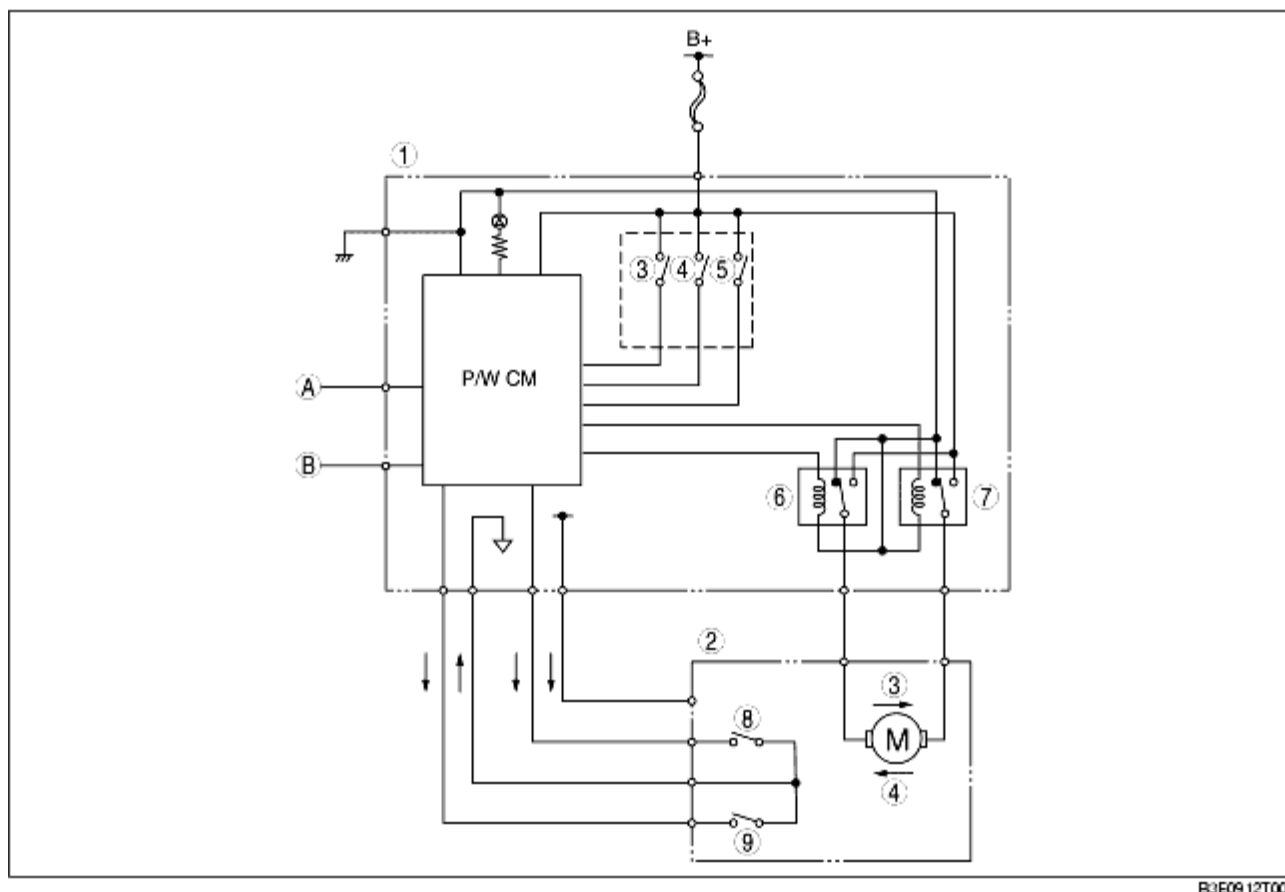

B3E09 12T006

1	Power window subswitch
2	Power window motor
3	Close
4	Open
5	Auto
6	Close relay
7	Open relay
8	Hall effect switch 1
9	Hall effect switch 2