

# FRONT POWER WINDOW REGULATOR REMOVAL/INSTALLATION


B3E091258560W01

1. Disconnect the negative battery cable.


2. Remove the following parts:

- (1) Inner garnish (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
- (2) Front door trim (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#))
- (3) Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/INSTALLATION.](#))
- (4) Front door glass (See [FRONT DOOR GLASS REMOVAL/INSTALLATION.](#))
- (5) Power window motor (See [POWER WINDOW MOTOR REMOVAL/INSTALLATION.](#))

3. Remove the nuts.

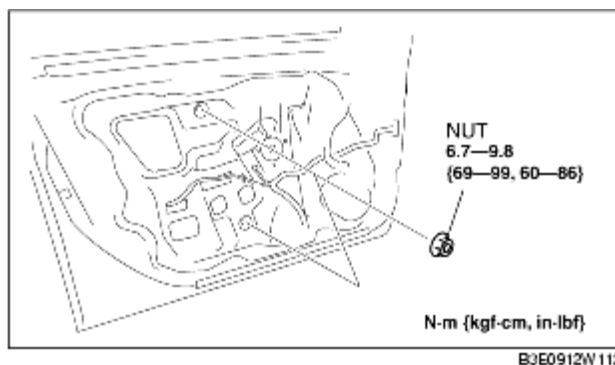

4. Insert your hand through the front speaker installation hole, rotate the drum housing in the direction shown in the figure and disengage the tabs from the rear door module.

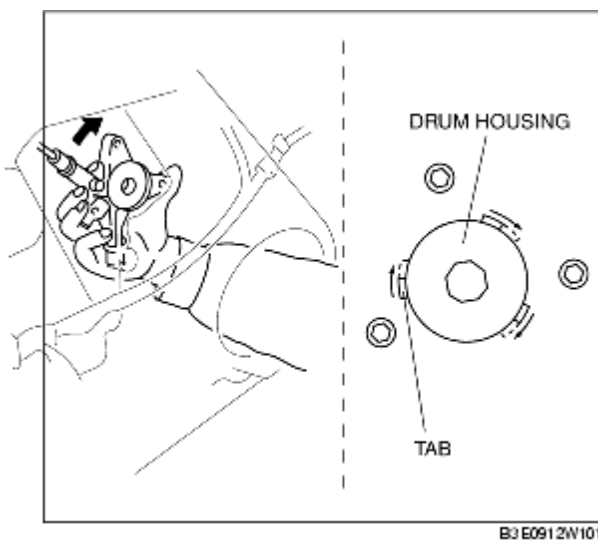

5. Remove the front power window regulator through the speaker installation hole.

6. Install in the reverse order of removal.

**Caution**

- Make sure the cable does not unspool from the drum housing when installing.