



FRONT MANUAL WINDOW REGULATOR REMOVAL/INSTALLATION

B3E091258561W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Inner garnish (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
 - (2) Regulator handle (See [REGULATOR HANDLE REMOVAL.](#))
 - (3) Front door trim (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#))
 - (4) Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/INSTALLATION.](#))
 - (5) Front door glass (See [FRONT DOOR GLASS REMOVAL/INSTALLATION.](#))
3. Remove the nuts and the bolts.

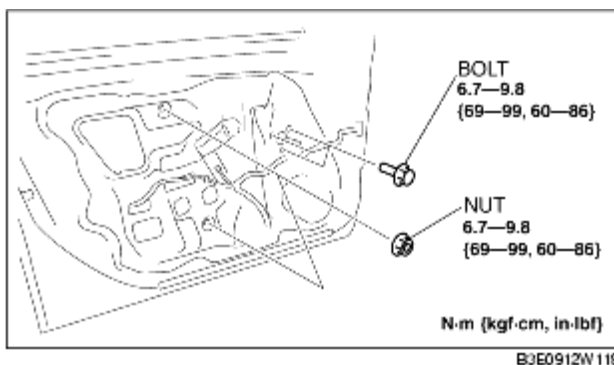

4. Remove the front manual window regulator through the speaker installation hole.

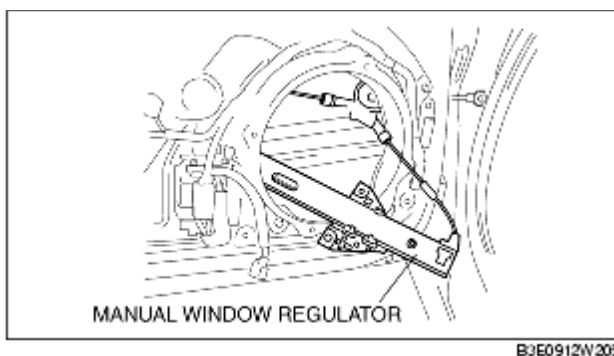

5. Install in the reverse order of removal.