


# REAR DOOR GLASS REMOVAL/INSTALLATION


B3E091259500W02

## 4SD

1. Fully lower the rear door glass.
2. Remove the rear beltline molding. (See [REAR BELTLINE MOLDING REMOVAL/INSTALLATION.](#))
3. Adjust the door glass position as shown in the figure.

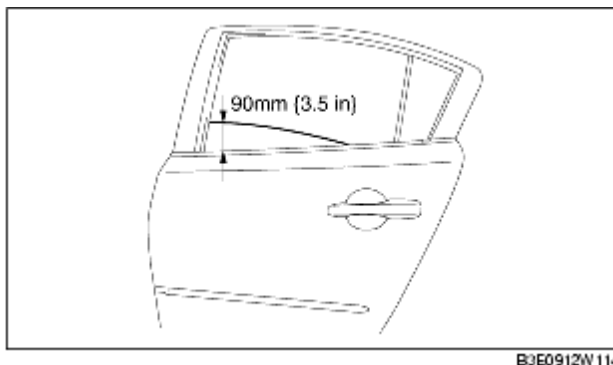


4. Disconnect the negative battery cable. (Vehicles with power window system)
5. Remove the regulator handle. (Vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#))
6. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/INSTALLATION.](#))
7. Remove the bolts and screw.

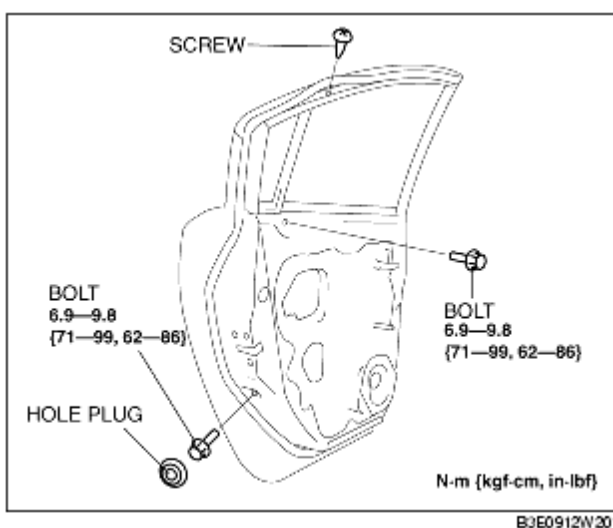

8. Remove the rear door glass guide and glass run channel as a single unit.

9. Remove the hole cover.

10. Remove the screw.

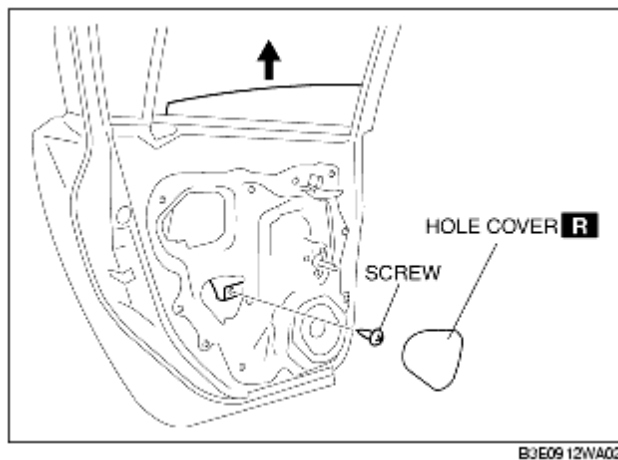

11. Lift the rear door glass up and remove while tilting it.

12. Install in the reverse order of removal.

## 5HB


1. Fully lower the rear door glass.

2. Remove the sail garnish. (See [SAIL GARNISH REMOVAL/INSTALLATION](#).)

3. Remove the rear door garnish. (See [REAR DOOR GARNISH REMOVAL/INSTALLATION](#).)

4. Remove the rear beltline molding. (See [REAR BELTLINE MOLDING REMOVAL/INSTALLATION](#).)

5. Adjust the door glass position as shown in the figure.

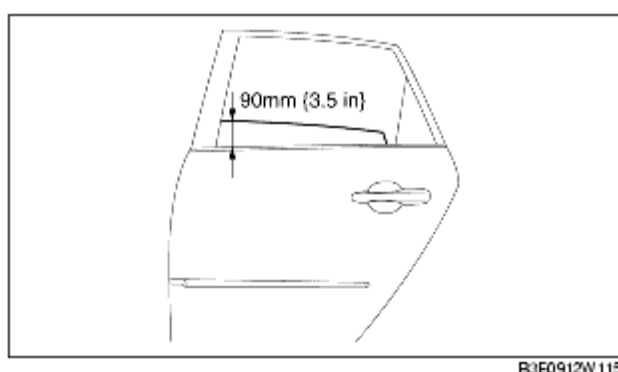


6. Disconnect the negative battery cable. (Vehicles with power window system)

7. Remove the regulator handle. (Vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL](#).)

8. Remove the rear door trim. (See [REAR DOOR TRIM REMOVAL/INSTALLATION](#).)


9. Remove the bolts.

10. Remove the rear door glass guide and glass run channel as a single unit.

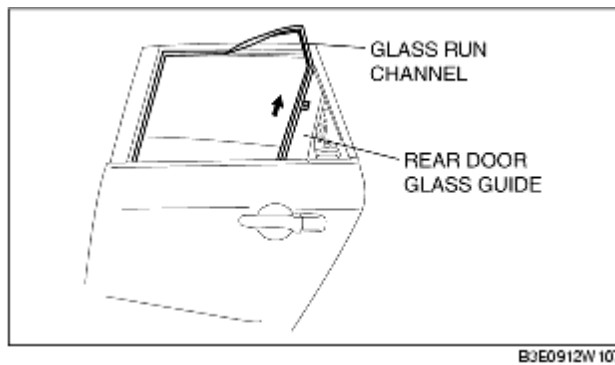

11. Remove the hole cover.

12. Remove the screw.

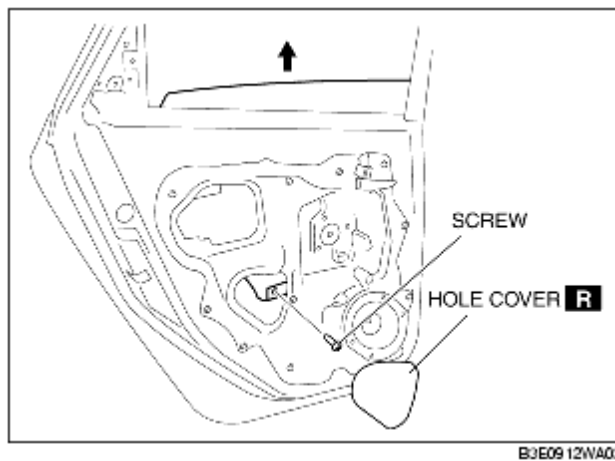

13. Lift the rear door glass up and remove while tilting it.

14. Install in the reverse order of removal.