


# POWER WINDOW MOTOR INSPECTION

B3E091259560W02

1. Apply battery positive voltage and connect ground to power window motor terminals E and F, and then inspect the power window motor operation.

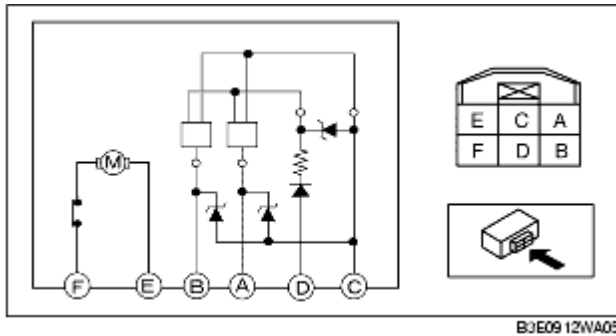

- If the power window motor does not operate as indicated in the table, replace it.

Operation	Terminal	
	Front: F	Front: E
	Rear: E	Rear: F
Open	GND	B+
Closed	B+	GND

2. Connect battery positive voltage to power window motor terminal D and connect terminal C to ground.
3. Operate the power window motor and measure the voltage at terminals A and B.

- If there is any malfunction, replace the power window motor.

**Voltage****Pulse: Max. 12V, Min. 0 V**