

QUARTER WINDOW GLASS REMOVAL

B3E091262580W01


1. Remove the following parts:

- (1) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION](#).)
- (2) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION](#).)
- (3) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION](#).)
- (4) Trunk side upper trim (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION](#).)
- (5) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION](#).)


2. Set the headliner out of the way.

3. Apply protective tape along the edge of the body and the quarter window glass.


4. Cut off the pins.

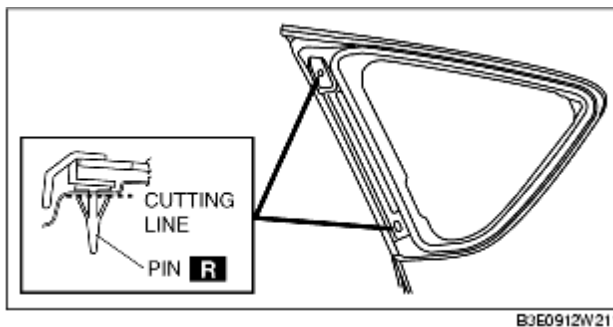

5. Make a hole through the sealant from the inside of the vehicle using an awl, avoiding the pins and fastener.

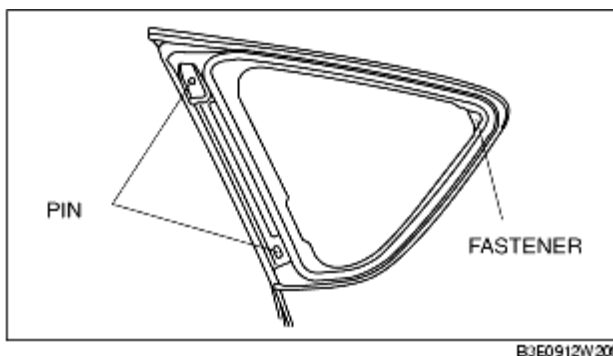

6. Pass the **SST** (piano wire), cut to sufficient length, through the hole.

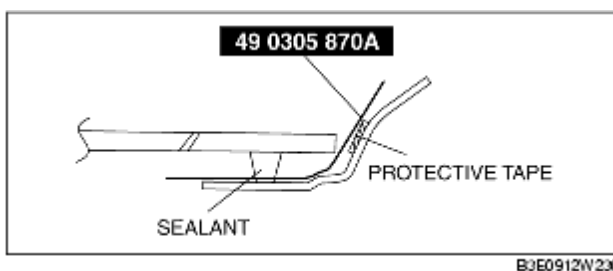

Warning


- Using the SST (piano wire) with bare hands can cause injury. Always wear gloves when using the SST (piano wire).

7. Wind each end of the **SST** (piano wire) around a bar.

Note

- Use a long sawing action to spread the work over the whole length of the **SST** (piano wire) to prevent it from breaking due to localized heating.

8. Fix one end of the **SST** (piano wire), and while pulling the other end, cut the sealant around the quarter window glass.

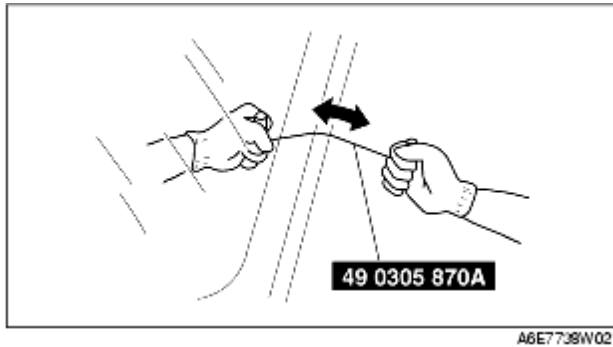

Note

- As the upper part of the pin adheres to the sealant, cut it using the **SST** (piano wire).

9. Remove the quarter window glass.