

POWER WINDOW SYSTEM INITIAL SETTING

B3E091266350W01

Note

- Initial setting must be performed for the switch of each seat.
- If the following operations have been performed, initial setting is reset, and auto up/down and two-step down operation are disabled. Therefore, performing initial setting is necessary.
 - Negative battery cable disconnected or power window system power supply fuse removed (Perform initial setting for the switches of all seats.)
 - Power window switch connector disconnected (Perform initial setting for the switch connected with the connector.)

1. Turn the ignition switch to the ON position.
2. Press the switch of each seat and fully open the door glass.
3. Pull the switch of each seat to the manual-up position to fully close the door glass, and keep holding the switch up at the position for **approx. 2 s**.