


POWER OUTER MIRROR ASSEMBLY/DISASSEMBLY

B3E091269110W02

1. Disassemble in the order indicated in the table.

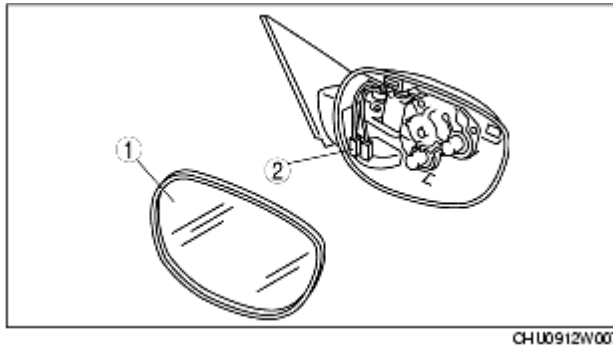


| | |
|---|---|
| 1 | Outer mirror glass (See Outer Mirror Glass Disassembly Note) (See Outer Mirror Glass Assembly Note) |
| 2 | Connector (vehicles with heated outer mirrors) |

2. Assemble in the reverse order of disassembly.

Outer Mirror Glass Disassembly Note

1. Press area A of the mirror glass so that area B moves outward.

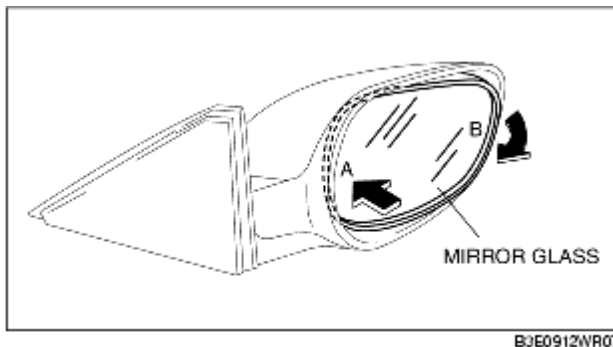


2. Detach pin A while lifting up the inside of the mirror glass holder.

3. Pull out the mirror glass holder and detach pins B.
4. Remove the mirror glass holder and the mirror glass as a single unit.

Outer Mirror Glass Assembly Note

1. Press area A of the mirror glass into the base to attach pin A.

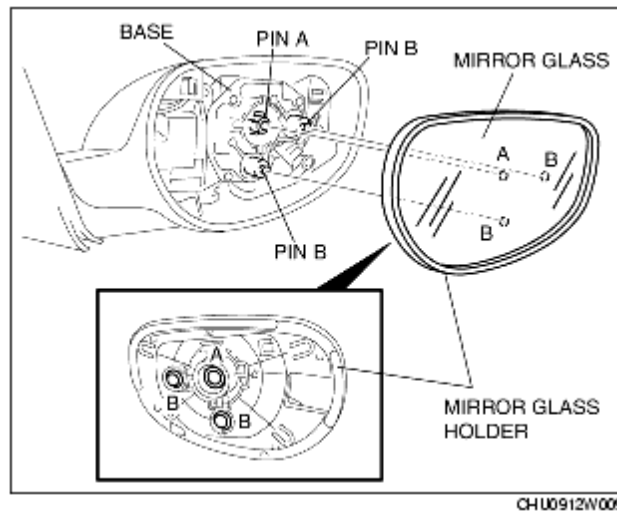

2. Press areas B of the mirror glass into the base to attach pins B.