


POWER OUTER MIRROR INSPECTION

B3E091269110W03


1. Apply battery positive voltage to the power outer mirror terminals and inspect the operation of the power outer mirror.

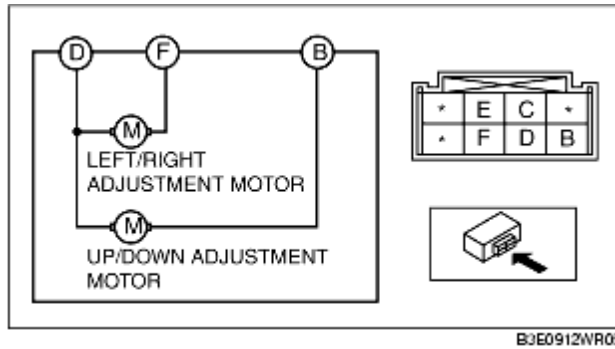

- If not as specified, replace the power outer mirror.

Mirror operation	Terminal	
	B+	GND
Up	B	D
Down	D	B
Left	F	D
Right	D	F

2. Inspect for continuity between the power outer mirror heater terminals.

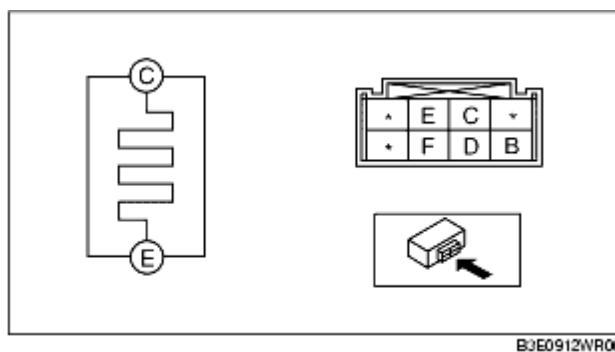

- If not as specified, replace the power outer mirror.

Mirror operation	Terminal	
	C	E
Heater	<div style="display: flex; align-items: center;"> ○ ○ ○ ○ </div>	

A6E7732W010