


REAR MANUAL WINDOW REGULATOR REMOVAL/INSTALLATION

B3E091272561W01


1. Remove the following parts:

- (1) Beltline molding (See [REAR BELTLINE MOLDING REMOVAL/INSTALLATION.](#))
- (2) Sail garnish (5HB) (See [SAIL GARNISH REMOVAL/INSTALLATION.](#))
- (3) Rear door garnish (5HB) (See [REAR DOOR GARNISH REMOVAL/INSTALLATION.](#))
- (4) Regulator handle (See [REGULATOR HANDLE REMOVAL.](#))
- (5) Rear door trim (See [REAR DOOR TRIM REMOVAL/INSTALLATION.](#))
- (6) Rear door glass guide and glass run channel
- (7) Rear door glass (See [REAR DOOR GLASS REMOVAL/INSTALLATION.](#))

2. Remove the nuts and the bolts.

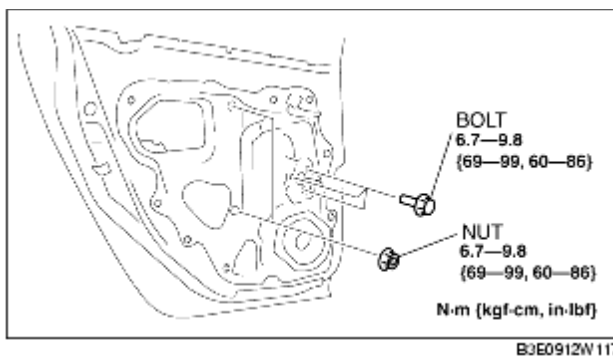

3. Remove the rear manual window regulator through the rear door unit hole.

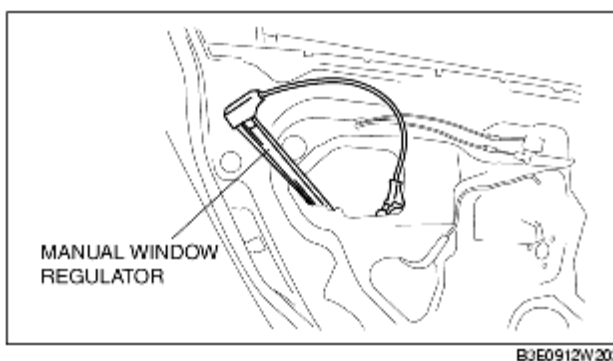

4. Install in the reverse order of removal.