


SEAT WARMER UNIT INSPECTION


B3E091388110W03

1. Remove the front seat. (See [FRONT SEAT REMOVAL/INSTALLATION.](#))
2. Remove the seat cushion trim. (See [FRONT SEAT DISASSEMBLY/ASSEMBLY.](#))
3. While inspecting for continuity between the terminals A and B of the connector, use a dryer to warm the thermostat of the seat warmer unit on seat cushion.

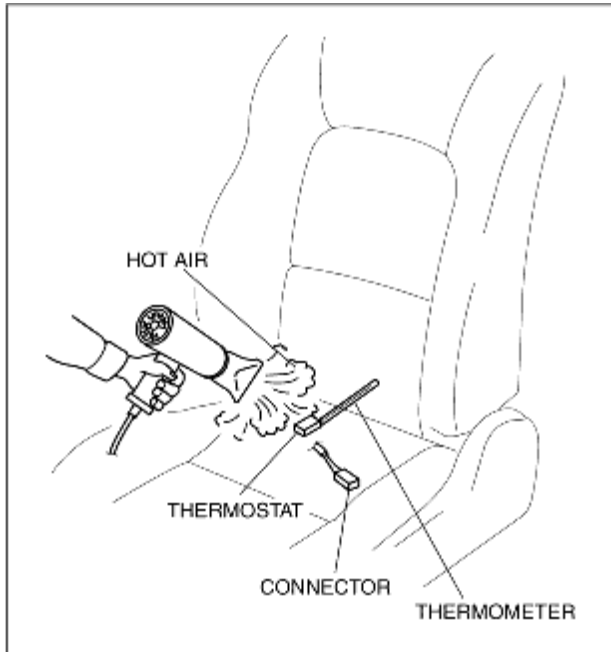

B3E0913W111

4. Verify that the continuity between the seat warmer terminals is as indicated in the table.

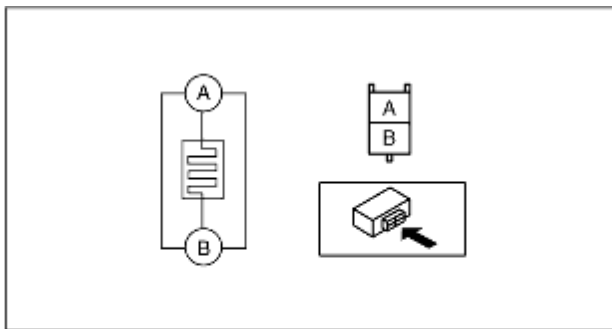

B3E0913W112

- If not as indicated in the table, replace the seat warmer switch.

Thermostat temperature	Terminal	
	A	B
More than approx. 37 °C {99 °F}		
Less than approx. 27 °C {81 °F}	○ — ○	○ — ○

B3E0913W113