


INTRUDER SENSOR REMOVAL/INSTALLATION

B3E091400172W01

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Sunroof seaming welt (vehicles with sunroof)
 - (2) Console (4SD) (See [CONSOLE REMOVAL/INSTALLATION.](#))
 - (3) A-pillar trim (See [A-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (4) Upper anchor of the front seat belt (See [FRONT SEAT BELT REMOVAL/INSTALLATION.](#))
 - (5) Front scuff plate (See [FRONT SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (6) Rear scuff plate (See [REAR SCUFF PLATE REMOVAL/INSTALLATION.](#))
 - (7) B-pillar lower trim (See [B-PILLAR LOWER TRIM REMOVAL/INSTALLATION.](#))
 - (8) B-pillar upper trim (See [B-PILLAR UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (9) Rear seat (See [REAR SEAT REMOVAL/INSTALLATION.](#))
 - (10) Tire house trim (See [TIRE HOUSE TRIM REMOVAL/INSTALLATION.](#))
 - (11) Trunk side upper trim (5HB) (See [TRUNK SIDE UPPER TRIM REMOVAL/INSTALLATION.](#))
 - (12) C-pillar trim (See [C-PILLAR TRIM REMOVAL/INSTALLATION.](#))
 - (13) Map light (See [MAP LIGHT REMOVAL/INSTALLATION.](#))
 - (14) Interior light (See [INTERIOR LIGHT REMOVAL/INSTALLATION.](#))
 - (15) Sunvisor (See [SUNVISOR REMOVAL/INSTALLATION.](#))
 - (16) Assist handle (See [ASSIST HANDLE REMOVAL/INSTALLATION.](#))
3. Disconnect the intruder sensor.
4. Remove the screws.

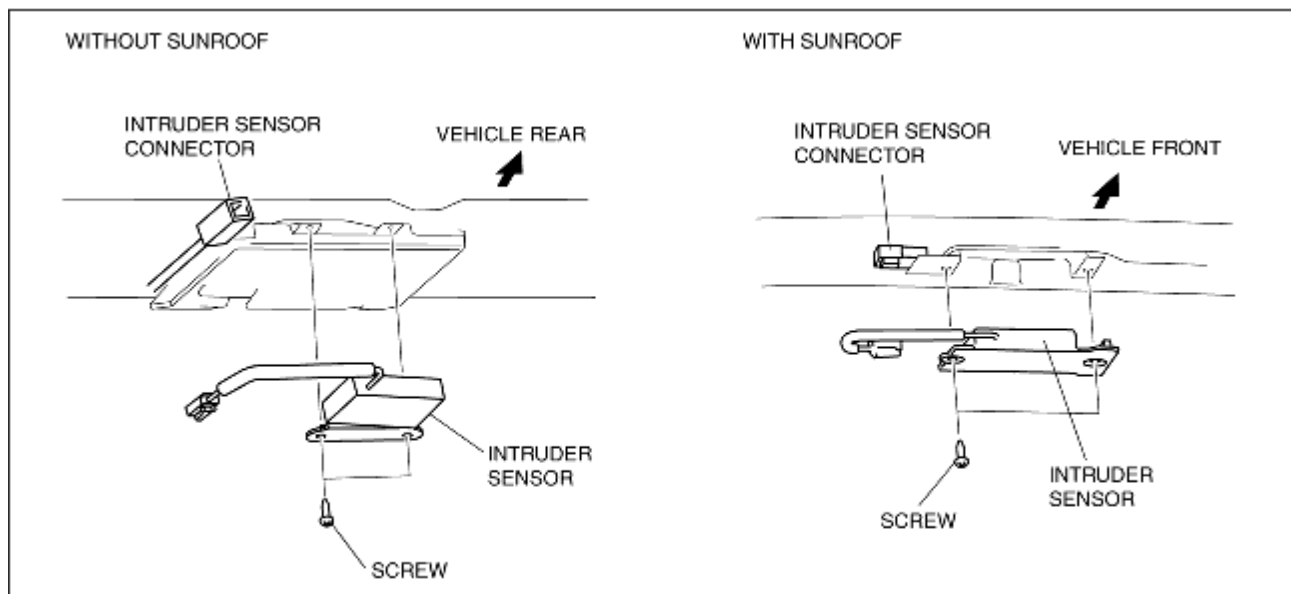

B3E09141004

5. Remove the intruder sensor.
6. Install in the reverse order of removal.