


# IMMOBILIZER SYSTEM WIRING DIAGRAM

B3E091401077T03

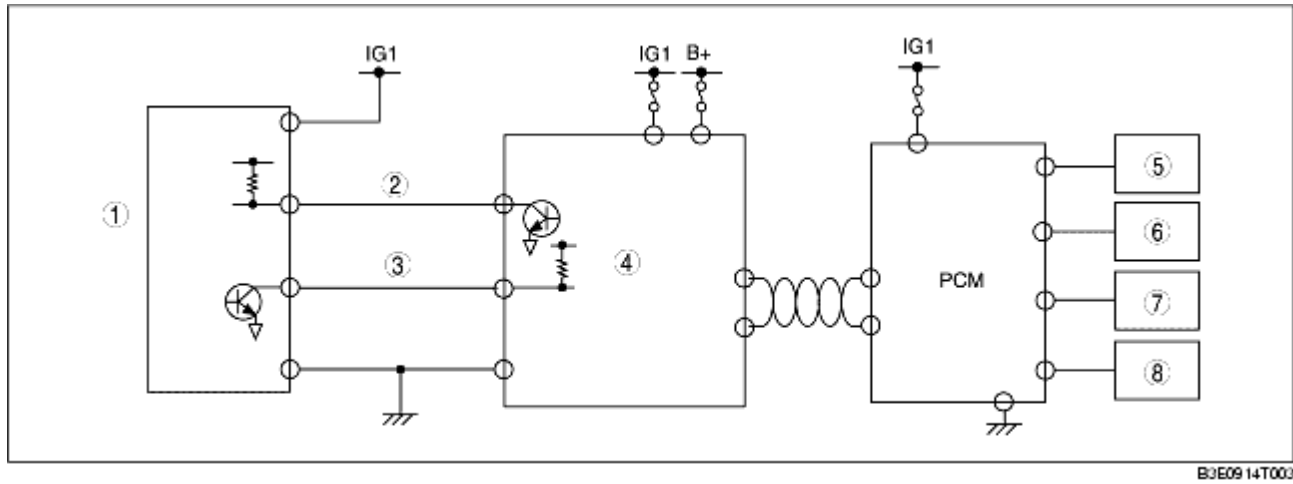

B3E0914T003

1	Coil antenna
2	Tx line
3	Rx line
4	Instrument cluster
5	Fuel injector
6	Fuel pump relay
7	Ignition coil
8	Starter relay