


POWER DOOR LOCK SYSTEM AND KEYLESS ENTRY SYSTEM WIRING DIAGRAM

B3E091401090T02

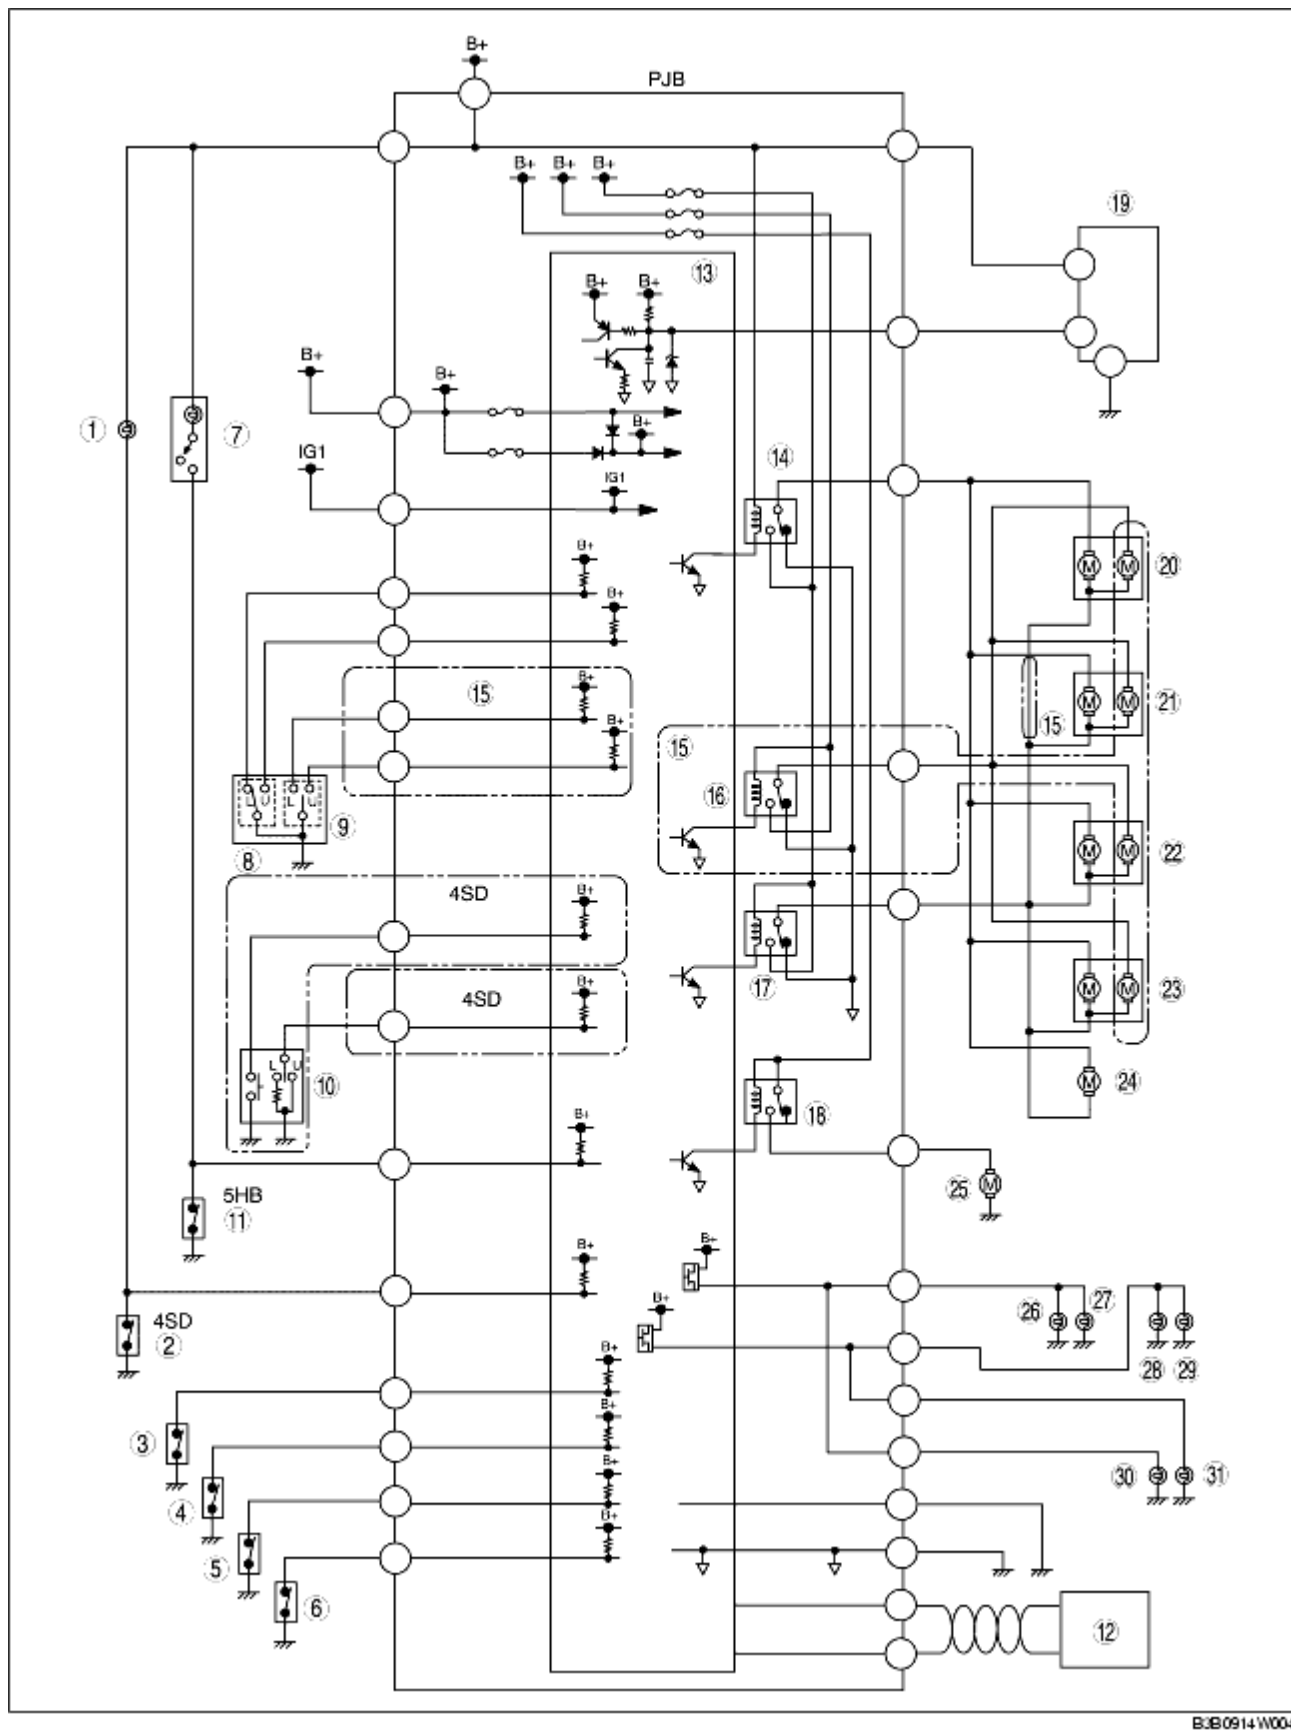

1	Trunk compartment light
2	Trunk lid latch switch

3	Front door latch switch (LH)
4	Front door latch switch (RH)
5	Rear door latch switch (LH)
6	Rear door latch switch (RH)
7	Cargo compartment light
8	Door lock-link switch
9	Door key cylinder switch
10	Trunk lid key cylinder switch
11	Liftgate latch switch
12	Instrument cluster
13	Microcomputer
14	Door lock relay
15	With double lock function
16	Double lock relay
17	Door unlock relay
18	Trunk lid unlock relay
19	Keyless control module
20	Front door lock actuator (driver's side)
21	Front door lock actuator (passenger's side)
22	Rear door lock actuator (LH)
23	Rear door lock actuator (RH)
24	Liftgate lock actuator
25	Trunk lid unlock actuator
26	Front turn light (LH)
27	Side turn light (LH)
28	Front turn light (RH)
29	Side turn light (RH)
30	Rear turn light (LH)
31	Rear turn light (RH)