

THEFT-DETERRENT SYSTEM OUTLINE

B3E091450000T01

- The theft-deterrent system includes sound and light alarms that activate when the bonnet, the trunk lid/liftgate, or a door is opened by means other than the transmitter. The turn lights flash and the theft-deterrent siren sound.
- When the transmitter unlock button is pressed, the alarms stop.
- An intruder sensor has been installed in the forward part of the roof (Vehicles without sunroof) or in the center part of the roof (Vehicles with sunroof). The intruder sensor senses movement in the vehicle based on radio waves, and sends an alert signal to the PJB.
- A theft-deterrent siren has been installed on the rear, left side of the trunk compartment. The theft-deterrent siren includes an internal back-up power supply so that if power from the battery is cut by any means, the siren will still sound.
- An intruder sensor cut-off button is provided on the transmitter. If the intruder sensor cut-off button is pressed while the theft-deterrent system is pre-armed, intruder sensor radio wave output is cut, and movement detection is stopped.