


## FRONT DOOR KEY CYLINDER REMOVAL/INSTALLATION

B3E091458490W01

1. Disconnect the negative battery cable. (vehicles with power window system or power outer mirror)
2. Fully roll up the front door glass.
3. Remove the inner garnish. (See [INNER GARNISH REMOVAL/INSTALLATION](#).)
4. Remove the regulator handle. (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL](#).) (See [REGULATOR HANDLE INSTALLATION](#).)
5. Remove the front door trim. (See [FRONT DOOR TRIM REMOVAL/INSTALLATION](#).)
6. Remove the hole plug.
7. Remove the rod from the front outer handle.
8. Remove the bolt, then remove the rod protector.

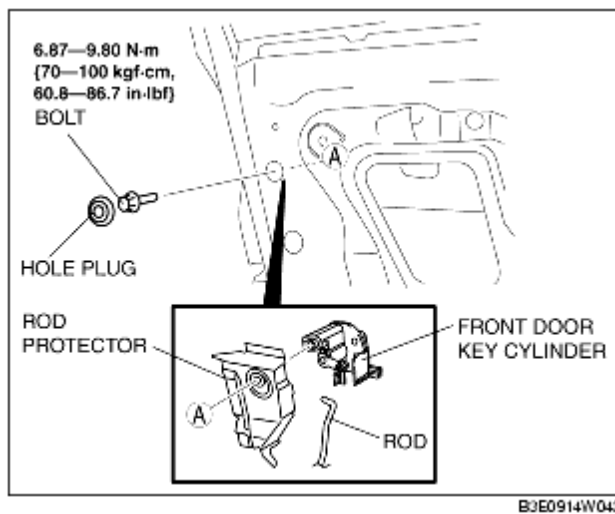

9. Remove the rod from the front door key cylinder.
10. Remove the front door key cylinder.
11. Install in the reverse order of removal.