


FRONT DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION

B3E091458490W02

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Inner garnish (See [INNER GARNISH REMOVAL/INSTALLATION.](#))
 - (2) Regulator handle (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
 - (3) Front door trim (See [FRONT DOOR TRIM REMOVAL/INSTALLATION.](#))
 - (4) Front door glass (See [FRONT DOOR GLASS REMOVAL/INSTALLATION.](#))
 - (5) Front door speaker (See [FRONT DOOR SPEAKER REMOVAL/INSTALLATION.](#))
 - (6) Inner handle (See [INNER HANDLE REMOVAL/INSTALLATION.](#))
 - (7) Front door unit (See [FRONT DOOR UNIT REMOVAL/INSTALLATION.](#))
3. Pull the stopper of the front door lock actuator connector in the direction of the arrow (1).
4. Disconnect the front door lock actuator connector while pushing at point A.

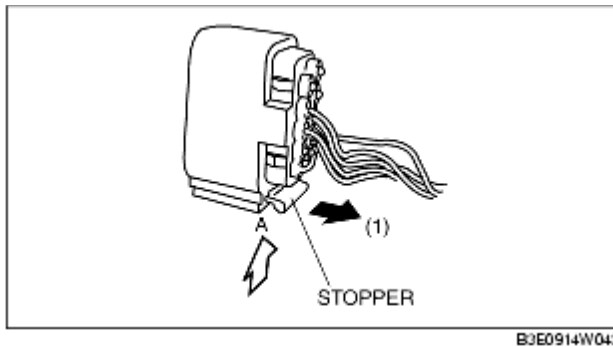

5. Remove the front door latch and lock actuator from the front door unit.
6. Install in the reverse order of removal.