


REAR DOOR LATCH AND LOCK ACTUATOR REMOVAL/INSTALLATION

B3E091458490W03

1. Disconnect the negative battery cable.
2. Remove the following parts:
 - (1) Sail garnish (5HB) (See [SAIL GARNISH REMOVAL/INSTALLATION.](#))
 - (2) Rear door garnish (5HB) (See [REAR DOOR GARNISH REMOVAL/INSTALLATION.](#))
 - (3) Regulator handle (vehicles with manual window system) (See [REGULATOR HANDLE REMOVAL.](#)) (See [REGULATOR HANDLE INSTALLATION.](#))
 - (4) Rear door trim (See [REAR DOOR TRIM REMOVAL/INSTALLATION.](#))
 - (5) Rear door glass (See [REAR DOOR GLASS REMOVAL/INSTALLATION.](#))
 - (6) Rear door speaker (See [REAR DOOR SPEAKER REMOVAL/INSTALLATION.](#))
 - (7) Inner handle (See [INNER HANDLE REMOVAL/INSTALLATION.](#))
 - (8) Rear door unit (See [REAR DOOR UNIT REMOVAL/INSTALLATION.](#))
3. Pull the stopper of the rear door lock actuator connector in the direction of the arrow (1).
4. Disconnect the rear door lock actuator connector while pushing at point A.

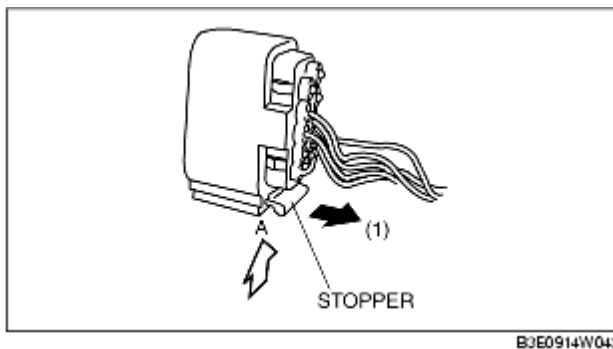

B3E0914W043

5. Remove the rear door latch and lock actuator from the rear door unit.
6. Install in the reverse order of removal.