


REAR DOOR LOCK ACTUATOR INSPECTION

B3E091458490W07

1. Apply battery positive voltage and connect ground to the corresponding rear door lock actuator terminals, and inspect the rear door lock actuator operation.

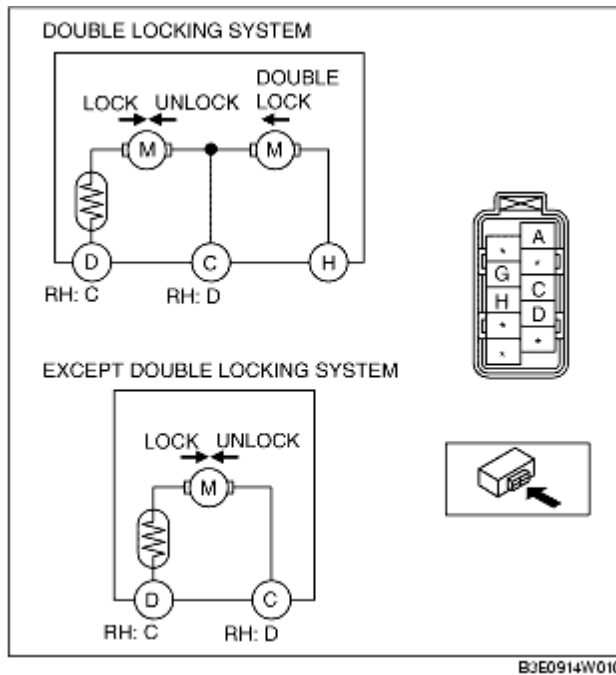

- If not as specified, replace the rear door latch and lock actuator.

Lock actuator operation	Connection	
	B+	GND
Double lock	H	LH: C RH: D
Lock	LH: D RH: C	LH: C RH: D
Unlock	LH: C RH: D	LH: D RH: C