



## FRONT DOOR LATCH SWITCH INSPECTION

B3E091458490W08

1. When inspecting the latch, press the latch lever using a flathead screwdriver or a similar tool.

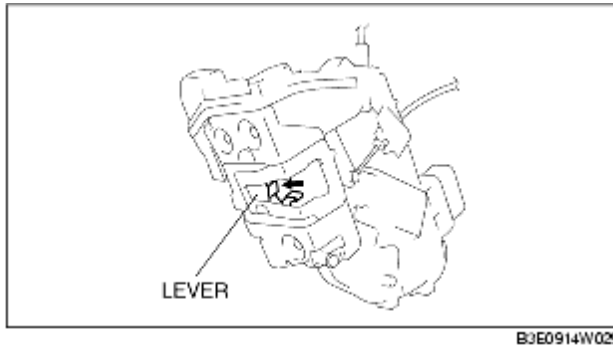

2. Inspect for continuity between the front door latch switch terminals.

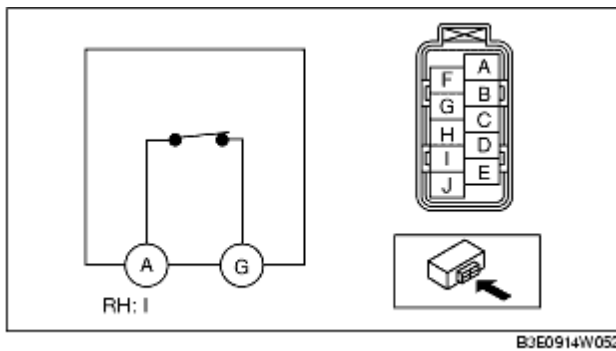

- If not as specified, replace the front door latch and lock actuator.

Latch condition	Terminal	
	LH: A RH: I	G
Latch (door is closed)	○ — ○ : Continuity	
Unlatch (door is open)	○	○

Diagram illustrating the front door latch switch terminals. The terminals are labeled A, G, and I. A continuity tester is shown connected to terminals A and G. The diagram is identified by the code B3E0914W012.